



Galileo
luna

SAFETY CONSIDERATIONS

You must carefully read and understand this entire manual before using your Galileo. Diving has many inherent risks. Even if you follow the instructions of this manual in a careful manner, it is still possible that you may be seriously injured or die from decompression sickness, oxygen toxicity or some other inherent risk of scuba diving with Nitrox or compressed air. Unless you are fully aware of these risks and are willing to personally accept and assume responsibility for those risks, do not use Galileo.

Guidelines for the use of Galileo:


The following guidelines for using Galileo are derived from the latest medical research and the recommendations of the American Academy of Underwater Sciences for diving with diving computers.

Following these guidelines will greatly increase your safety while diving, but cannot guarantee that decompression sickness or oxygen toxicity will not occur.

- Galileo is designed for dives with compressed air (21%O₂) and Nitrox (22 to 100% O₂) only. Do not use Galileo for dives made with other mixed gases.
- It is absolutely necessary to check the set mixture before each dive and to compare it to the gas mixture currently used. Always remember: setting an incorrect mixture carries an inherent risk of decompression sickness and/or oxygen toxicity! Maximum deviation from the measured mixture must not exceed 1% O₂. An incorrect gas mixture can be lethal!
- Only use Galileo with open-circuit breathing systems.
- Only use Galileo for diving with an independent breathing apparatus. Galileo is not designed for long-term exposures with Nitrox.
- Always observe the visual and audible alarm signals. Avoid situations of increased risk which are marked with a warning sign in this operating manual.
- Galileo has a ppO₂ warning. The default limit is set at 1.4bar ppO₂max. It can be changed between 1.2 and 1.6bar.
- Frequently check the "oxygen clock" (CNS O₂). Ascend and finish the dive if the CNS O₂ exceeds 75%.
- Never dive deeper than the Maximum Operating Depth (MOD) pertinent to the gas mixture in use.
- Always check the diving limits considering the oxygen content and standard sports diving procedures (decompression sickness, oxygen toxicity).
- In accordance with the recommended maximum diving limit of all instructional agencies, do not dive deeper than 40m/130ft.
- The danger of nitrogen narcosis has to be taken into consideration. Galileo gives no warning about this.
- On all dives, with or without dive computer, make a safety stop for at least 3 minutes at 5m/15ft.
- All divers using dive computers to plan dives and indicate or determine decompression status must use their own computer, which they take with them on all dives.
- If Galileo fails at any time during the dive, the dive must be terminated, and appropriate surfacing procedures (including a slow ascent and a 3 to 5 minute safety stop at 5m/15ft) should be initiated immediately.
- Comply with the ascent rate and carry out any decompression stop required. If the computer should fail for any reason, you must ascend at a rate of 10m/30ft per minute or less.
- On any given dive, both divers in a buddy pair must follow the most conservative dive computer for that particular dive.
- Never dive without a buddy. Galileo does not substitute for a dive buddy.

- Only make dives that are appropriate to your level of dive training. Galileo does not increase your knowledge of diving.
- Always dive with back-up instruments. Make sure that you always use back-up instrumentation including a depth gauge, submersible pressure gauge, digital bottom timer or dive watch, and have access to decompression tables whenever diving with a dive computer.
- Avoid repeated ascents and descents (yo-yo diving).
- Avoid repeated heavy workload while at depth.
- Plan the dives to be shorter if they are made in cold water.
- After finishing the decompression or at the end of a no-stop dive, the final stage of the ascent should be as slow as possible.
- You **MUST** be familiar with all signs and symptoms of decompression sickness before using Galileo! Seek **IMMEDIATE** treatment for decompression sickness should any of these signs or symptoms occur after a dive! There is a direct correlation between the effectiveness of treatment and the delay between the onset of symptoms and the treatment for decompression sickness.
- Only dive with Nitrox after you have been thoroughly instructed by a recognized institution.

Repetitive dives

- Do not start your next dive before your CNS O₂% status has dropped below 40%.
- When diving with Nitrox, make sure your surface interval is long enough (just like diving with compressed air). Plan for a minimum surface interval of two hours. Oxygen, too, needs sufficient time to leave the body.
- Match gas mixture to the intended dive.
- Do not attempt a repetitive dive if the no-dive warning  is visible on the display.
- Plan a day without diving once a week.
- If you have to change computers, wait at least 48 hours before carrying out your next dive.
- Diving after a reset of the remaining saturation may lead you into potentially hazardous situations which could result in death or serious injury. After a reset of the remaining saturation do not dive for at least 48 hours.

Altitude and diving

- Do not dive at altitudes higher than 4,000m/13,000ft.
- After a dive do not rise to altitudes that Galileo prohibits via the altitude range indicator.

Flying after diving

- After diving, wait at least 24 hours prior to flying.

Important notice to individuals with pacemakers, defibrillators or other implanted electronic devices. Individuals who have a pacemaker use the UWATEC Galileo dive computer at their own risk. Before starting use, we recommend a maximal exercise stress test under a doctor's supervision. The test is to ensure the safety and reliability of the simultaneous use of the pacemaker and the Galileo dive computer.



Galileo dive instrument is a personal protective equipment in compliance with the essential safety requirements of the European Union directive 89/686/EEC. RINA SpA, Via Corsica 12, I-16128 Genoa, notified body no. 0474, have certified its conformity with the European Standard EN 250: 2014 (EN 250: 2014 : Respiratory equipment – Open circuit self-contained compressed air diving apparatus – requirements, testing and marking);

Galileo dive instrument is also compliant with the European Union directive 2014/30/EU.

Standard EN 13319: 2000

Galileo dive instrument is compliant with the European standard EN 13319: 2000 (EN 13319: 2000 – Depth gauges and combined depth and time measuring devices – Functional and safety requirements, tests methods).

Welcome to UWATEC dive computers and thank you for purchasing Galileo. You are now the owner of an extraordinary partner for your dives. This manual provides you easy access to UWATEC state of the art technology and Galileo's key features and functions. Should you wish to know more about SCUBAPRO UWATEC diving equipment, please visit our website www.scubapro.com.



WARNING

- Galileo has a depth rating of 330m/1084ft in GAUGE mode only.
- As a decompression computer Galileo functions to a depth of 120m/394ft only.
- At depths between 115m/377ft and 120m/394ft in computer mode the message SWITCHING TO GAUGE appears on the display and at depths over 120m/394ft Galileo will automatically switch to GAUGE mode and cannot be used as decompression computer for the remainder of the dive.
- Diving at oxygen partial pressures higher than 1.6bar (corresponding to a depth of 67m/220ft when breathing compressed air) is extremely dangerous and could lead to serious injury or death.

TABLE OF CONTENTS

SAFETY CONSIDERATIONS	1
GUIDELINES FOR THE USE OF GALILEO	1
1. INTRODUCTION TO GALILEO	6
1.1 GLOSSARY	7
1.2 OPERATING MODES	9
1.3 TURNING ON GALILEO AND TIME OF DAY DISPLAY	9
1.4 ALTITUDE ALARM AFTER A DIVE	10
1.5 NO-DIVE WARNING AFTER A DIVE	10
1.6 SOS	10
1.7 REPLACEABLE BATTERY	11
1.8 SCREEN CONFIGURATION OPTIONS	12
1.9 BUTTON OPERATION	13
1.10 BUTTON FUNCTIONS ON THE SURFACE	13
1.11 MOUNTING AND PAIRING OF THE HIGH-PRESSURE TRANSMITTER...	13
1.12 GAS SUMMARY TABLE	15
1.13 PDIS	15
1.13.1 INTRODUCTION TO PDIS	15
1.13.2 HOW DOES PDIS WORK?	17
1.13.3 SPECIAL CONSIDERATIONS WHEN DIVING WITH MORE THAN ONE GAS MIXTURE	17
1.14 TURNING OFF GALILEO	17
2. MENUS, SETTINGS AND FUNCTIONS	18
2.1 MAIN MENU DESCRIPTION	19
2.2 SETTING THE OXYGEN CONCENTRATION	19
2.3 DIVE SETTINGS	20
2.3.1 MB LEVEL	20
2.3.2 GAUGE MODE	20
2.3.3 SAFETY STOP TIMER	20
2.3.4 PPO ₂ MAX	20
2.3.5 NITROX RESET TIME	21

2.3.6	WATER TYPE.....	21
2.3.7	DESATURATION RESET	22
2.3.8	ALL-SILENT MODE.....	22
2.3.9	PDIS MODE	23
2.4	DIGITAL COMPASS.....	23
2.4.1	USING THE COMPASS ON THE SURFACE	23
2.4.2	SETTING THE AUTO-OFF TIME.....	24
2.4.3	SETTING THE DECLINATION.....	24
2.5	ALTIMETER	24
2.6	WARNING SETTINGS	25
2.6.1	MAXIMUM DEPTH	26
2.6.2	CNS O ₂ = 75%	26
2.6.3	NO-STOP = 2 MINUTES	27
2.6.4	ENTERING DECOMPRESSION.....	28
2.6.5	DIVE TIME AND TURN-AROUND TIME.....	28
2.6.6	TANK PRESSURE.....	29
2.6.7	RBT = 3 MINUTES	30
2.6.8	PRESSURE SIGNAL	30
2.6.9	ENTERING LEVEL STOPS	31
2.6.10	MB STOP IGNORED.....	31
2.6.11	MB LEVEL REDUCED.....	32
2.6.12	L0 NO-STOP TIME = 2 MINUTES WHEN DIVING AN MB LEVEL	32
2.6.13	ENTERING DECO WHEN DIVING AN MB LEVEL.....	33
2.7	CLOCK SETTINGS.....	33
2.7.1	WAKE-UP ALARM	34
2.7.2	TIME	34
2.7.3	TIME ZONE.....	34
2.8	OTHER SETTINGS.....	34
2.8.1	DEVICE INFORMATION	34
2.8.2	GAS INTEGRATION	34
2.8.3	BACKLIGHT DURATION	35
2.8.4	DISPLAY CONTRAST	36
2.8.5	IRDA SPEED.....	36
2.8.6	WATER CONTACTS.....	36
2.8.7	REVERT TO FACTORY SETTINGS.....	37
2.9	PERSONALIZATION	37
2.9.1	SCREEN CONFIGURATION	37
2.9.2	LANGUAGE	38
2.9.3	START-UP PICTURE	38
2.9.4	UNITS.....	38
2.9.5	WORKLOAD.....	38
2.9.6	OWNER INFORMATION	38
2.9.7	EMERGENCY INFORMATION	39
2.10	PICTURES	39
2.11	DIVE PLANNER.....	39
2.11.1	PLANNING A NO-STOP DIVE.....	40
2.11.2	PLANNING A DECOMPRESSION DIVE.....	40
2.12	REVIEWING THE LOGBOOK	40
3.	DIVING WITH GALILEO	42
3.1	NITROX.....	42
3.2	ALARMS	42

3.2.1	ASCENT RATE.....	43
3.2.2	MOD/PPO ₂	44
3.2.3	CNS O ₂ = 100%	45
3.2.4	MISSED DECOMPRESSION STOP	46
3.2.5	RBT = 0 MINUTES	46
3.2.6	LOW BATTERY	47
3.3	DISPLAY INFORMATION	48
3.3.1	DESCRIPTION OF ENTRIES	48
3.3.2	CLASSIC SCREEN CONFIGURATION	51
3.3.3	LIGHT SCREEN CONFIGURATION	51
3.3.4	FULL SCREEN CONFIGURATION.....	52
3.4	SPECIAL FUNCTIONS COMMON TO CLASSIC, LIGHT AND FULL CONFIGURATIONS	53
3.4.1	ACCESSING AND USING THE DIGITAL COMPASS.....	53
3.4.2	SETTING BOOKMARKS	54
3.4.3	SAFETY STOP TIMER.....	54
3.4.4	VIEWING DIVE PROFILE, INDIVIDUAL COMPARTMENT SATURATION AND PICTURES.....	55
3.4.5	ACTIVATING THE BACKLIGHT	56
3.5	DIVING WITH MB LEVELS	56
3.5.1	MB GLOSSARY	57
3.5.2	DISPLAY INFORMATION.....	58
3.5.3	DISPLAY OF UNDERLYING L ₀ DECOMPRESSION INFORMATION.....	58
3.5.4	CASCADING MB LEVELS.....	59
3.5.5	LEVEL STOP IGNORED/MB LEVEL REDUCED	59
3.6	DIVING WITH PDIS.....	59
3.6.1	PDIS DURING NO STOP DIVING	60
3.6.2	PDIS DURING DECOMPRESSION DIVING	61
3.6.3	PDIS DURING DIVES WITH MB LEVELS.....	62
3.7	ALTITUDE AND THE DECOMPRESSION ALGORITHM	62
3.7.1	PROHIBITED ALTITUDE.....	63
3.7.2	DECOMPRESSION DIVES IN MOUNTAIN LAKES.....	63
3.8	GAUGE MODE.....	63
3.9	BUTTON FUNCTION OVERVIEW	65
4.	GALILEO AND SMARTTRAK (PC INTERFACE)	66
4.1	INTRODUCTION TO SMARTTRAK.....	66
4.2	CHANGING SETTINGS	67
4.3	DOWNLOADING DIVES AND ORGANIZING YOUR LOGBOOK.....	68
4.4	UPLOADING PICTURES	69
4.5	UPLOADING LANGUAGES	70
4.6	UPDATING OR UPGRADING THE FIRMWARE.....	70
5.	TAKING CARE OF GALILEO.....	71
5.1	TECHNICAL INFORMATION.....	71
5.2	MAINTENANCE.....	71
5.2.1	REPLACING THE BATTERY IN GALILEO.....	71
5.2.2	REPLACING THE BATTERY IN THE SMART TRANSMITTER...	72
5.3	WARRANTY	73
5.4	INDEX	74

1. INTRODUCTION TO GALILEO

Galileo is diving technology made easy. It is an intuitive tool which monitors all aspects of the dive to provide you with accurate information relative to your individual experience. Galileo offers an array of features to enhance your diving pleasure.

- Listen to your body with built-in heart rate monitor technology for ultimate safety and peace of mind (patent pending). Enjoy the heart rate monitor with workload measurement integrated in the algorithm, brought to you thanks to a unique partnership between Polar and UWATEC. Heart rate can be called up on the display at any point of the dive. Dive profile and heart rate curve are stored in Galileo's memory for later analysis. After the dive, heart data can be downloaded to a personal computer through SmartTRAK, the dedicated UWATEC software, then analyzed.

Your Galileo User Manual is divided into five main chapters.

Chapter 1: **Introduction to Galileo.** This chapter provides an overview of the Galileo computer and describes its operating modes and functions when on the surface.

Chapter 2: **Menus, settings and functions.** This chapter describes every aspect of the computer as it relates to its use, functions and features. It describes all parameters you can adjust directly on the dive computer.

Chapter 3: **Diving with Galileo.** This chapter takes you underwater with your new computer. It's about everything Galileo can and will do to enhance your safety and fun underwater.

Chapter 4: **Galileo and SmartTRAK (PC interface).** This chapter is about personalization and customization. It describes how to change settings, to download and manage your logbook, to upload pictures and to upgrade or update the firmware on your new computer.

Chapter 5: **Taking care of Galileo.** This chapter illustrates how to take care of your new dive computer.

It is time to dive into the details now. We hope you will enjoy getting to know your new computer and we wish you many happy dives with Galileo.

1.1 Glossary

AVG	Average depth, calculated from the beginning of the dive or, in case of gauge mode, from the time of reset.
CNS O₂	C entral N ervous S ystem oxygen toxicity.
DESAT	Desaturation time. The time needed for the body to completely eliminate any nitrogen taken up during diving.
Dive time	The whole time spent below a depth of 0.8m/3ft.
Gas integration	The feature in Galileo to include tank pressure information in its calculations and to display it on the computer screen.
IrDA	Infrared Data Association, refers to the communication protocol between dive computer and PC.
Max depth	Maximum depth attained during the dive.
MB	Microbubble. Microbubbles are tiny bubbles that can build up in a diver's body during and after a dive.
MB level	One of the six steps, or levels, in UWATEC's customizable algorithm.
MOD	Maximum Operating Depth. This is the depth at which the partial pressure of oxygen (ppO ₂) reaches the maximum allowed level (ppO ₂ max). Diving deeper than the MOD will expose the diver to unsafe ppO ₂ levels.
Nitrox	A breathing mix made of oxygen and nitrogen, with the oxygen concentration being 22% or higher. In this manual, air is considered as a particular type of Nitrox.
NO FLY	Minimum amount of time the diver should wait before taking a plane.
No-stop time	This is the time that you can stay at the current depth and still make a direct ascent to the surface without having to perform decompression stops.
O₂	Oxygen.
O₂%	Oxygen concentration used by the computer in all calculations.
Pairing	The act of establishing a coded RF communication between Galileo and a high-pressure transmitter.
PDIS:	Profile-Dependent Intermediate Stop. This refers to the concept of introducing an intermediate stop during an ascent.
PDI stop:	This refers to the actual stop itself and the depth at which it is to be carried out.
ppO₂	Partial pressure of oxygen. This is the pressure of the oxygen in the breathing mix. It is a function of depth and oxygen concentration. A ppO ₂ higher than 1.6bar is considered dangerous.
ppO₂max	The maximum allowed value for ppO ₂ . Together with the oxygen concentration it defines the MOD.
Press	The act of pressing and releasing one of the buttons.
Press and hold	The act of pressing and holding one of the buttons for 1 second before releasing it.
RBT	Remaining Bottom Time, it is the time that a diver can spend at the current depth before having to ascend in order to reach the surface with the set tank reserve. The RBT accounts for all existing (if present) and upcoming decompression obligations.
SOS mode	The result of having completed a dive without respecting all mandatory decompression obligations.

Stopwatch	A stopwatch, for example to time certain legs of the dive.
SURF INT	Surface interval, the time from the moment the dive is closed.
TAT	Total ascent time, the time it takes to perform the ascent from your current depth to the surface in a decompression dive, including all decompression stops and assuming the ideal ascent rate.
UTC	Universal Time Coordinated, refers to time zone changes when traveling.
WL	Workload.

1.2 Operating modes

The functions of the Galileo computer can be grouped into three categories, each corresponding to a specific mode of operation:

- **surface** mode: the computer is on the surface. In this mode you can change settings, review your logbook, use the dive planner, see remaining desaturation after a dive, download to PC and much more;
- **dive** mode: the computer is at a depth of 0.8m/3ft or more. In this mode, Galileo monitors depth, time, temperature and performs all decompression calculations;
- **sleep** mode: the computer is on the surface for more than 3 minutes without operation. Though the computer appears to be turned off completely, it is still active. Galileo checks the ambient pressure once every 60 seconds for uninterrupted monitoring of the environment.

1.3 Turning on Galileo and time of day display

To start the computer, **press and hold** the right button. The screen will briefly show the Galileo logo and then switch to the **time of day** display. If you **press** the right button, you will skip the start-up picture and go straight to the **time of day** display. Think of this as the homepage of your new dive computer. This is where it all starts.

The type of information displayed in surface mode is different depending on whether Galileo has remaining saturation from a recent dive or is completely desaturated.

In case of no remaining saturation, the display looks as depicted below. The buttons are marked, from left to right, with "MENU", "LOG" and "LIGHT". The top of the display shows as default the Galileo logo, which can be replaced by the first two lines of the owner information data (refer to section 2.9.6 on owner information). The time of day is shown in the middle of the display. Underneath it, Galileo displays various information: on the top row the

date, the current temperature, the altitude class (in form of a stylized mountain, see section 3.7) and the battery capacity; on the lower row, the tank pressure, the set oxygen concentration, the corresponding MOD and the active MB level setting (see section 2.3.1).



If the computer has remaining desaturation from a recent dive, the upper portion of the screen is replaced with the following information: desaturation time, no-fly time, surface interval and CNS O₂ (if applicable).



The **remaining desaturation time (DESAT)** is calculated by the decompression model in the computer. Any dive started while there is remaining desaturation on your computer is considered a repetitive dive, meaning that Galileo accounts for the pre-existing nitrogen load in your body.

The **no-fly time (NO FLY)** is the time during which an exposure to the reduced

pressure inside the cabin of an airplane could cause decompression sickness, as calculated by the decompression model in the computer.

WARNING

Flying while Galileo displays NO FLY can result in serious injury or death.

The **surface interval (SURF INT)** is displayed from the moment the dive is closed (5 minutes after surfacing), for as long as there is remaining desaturation on the computer.

In addition, the bar graphs at the sides of the screen show the CNS O₂ (left bar) and the residual nitrogen loading (right bar). Depending on the amount of residual nitrogen, Galileo shows the prohibited altitude classes via grey lines inside the stylized mountain (see section 3.7 for more information).

1.4 Altitude alarm after a dive

Going to altitude is in a way similar to starting an ascent from a dive: you expose your body to a lower partial pressure of nitrogen and consequently you start off-gassing. After a dive, given the higher nitrogen loading in your body, even reaching an otherwise negligible altitude can potentially cause decompression sickness. Consequently, when in surface or sleep mode, Galileo constantly monitors the ambient pressure and uses it to evaluate your nitrogen loading and offgassing. If Galileo notices a drop in ambient pressure not compatible with your current nitrogen loading, it will activate the alarm to alert you of the potentially dangerous situation.



1.5 No-dive warning after a dive

If Galileo detects a situation of increased risk (due to the potential of microbubble accumulation from previous dives or a CNS O₂ level above 40%), the symbol will appear on the display together with a suggested surface interval. This minimum surface interval is what Galileo predicts being necessary to reduce the number of microbubbles and/or to reduce the CNS O₂ level below 40%.



You should not undertake a dive as long as the no-dive warning is displayed on the computer screen. If the warning is prompted by microbubble accumulation (as opposed to CNS O₂ over 40%) and you dive anyway, you will have shorter no-stop times or longer decompression times. Moreover, the duration of the microbubble warning at the end of the dive can increase considerably.

1.6 SOS

If you stay above a depth of 0.8m/3ft for more than 3 minutes without observing a prescribed decompression stop, the computer will switch into **SOS** mode. Once in **SOS** mode the computer will lock up and will be inoperable as a dive computer for 24 hours. If Galileo is used for diving within the 24 hours of an **SOS** lock, it will automatically switch to gauge mode and provide no decompression information.

⚠ WARNING

- Violating a mandatory decompression obligation may result in serious injury or death.
- Serious injury or death may result if a diver does not seek immediate treatment should any signs or symptoms of decompression sickness occur after a dive.
- Do not dive to treat symptoms of decompression sickness.
- Do not dive when the computer is in **SOS** mode.

The display shows the same information as in presence of desaturation, but in addition the message **SOS MODE** appears to the right of the time of day. Instead of the no-fly time, the 24-hour countdown is shown. The middle-button description changes from “**LOG**” to “**SOS**”, and by **pressing** it an emergency message is displayed (see section 2.9.7). The information for this display must be entered using SmartTRAK and it can be up to 20 lines long, scrollable with the left and middle buttons. Once the emergency message is displayed, **pressing** the right button (“**LOG**”) shows the details of the last dive.

02	MENU	SOS	LIGHT	M2
□	DESAT72:36		SOS24h	
□	SURF INT00:06		CNS027%	
21:26.55		SOS mode		
DATE	TEMP	▲		■
06.12	22°C			
BAR	O2	HDD	HE LVL	
---	21%	57.5h	L5	

▼	▲	LOG
▲ Allergic to penicillin!		
Blood type A+		
Emergency contact:		
John Smith		
+1 619 555 1234		
▼ Insurance Policy:		
Emergency message		

1.7 Replaceable battery

Galileo uses a CR12600SE type battery (also known as CR2NP) which is user – replaceable and is available from your SCUBAPRO UWATEC dealer. The display alerts you of the status of the battery. This is described with up to six elements inside the battery symbol:

- as long as four or more elements are lit, the battery has enough energy for safe diving;
- with three elements showing, the displays alternates between the regular information and the message **LOW BATTERY** next to the battery symbol in 10 second intervals. The battery has enough energy for safe diving but you should consider replacing it;
- if only two elements are lit, the display shows **REPLACE BATTERY** permanently. The battery does not have enough energy to ensure a safe dive. With only two elements lit, all audible alarms and the backlight are deactivated and the compass cannot be activated;
- if only one element is lit, the computer is not functional and the display shows the message **BATTERY EMPTY**.

MENU	LOG	LIGHT	
<i>Galileo luna</i>			
16:19.14			
Low battery!		■ ■ ■ ■	
BAR	O2	HDD	HE LVL
---	21%	57.5h	L5

MENU	LOG	LIGHT	
<i>Galileo luna</i>			
16:18.48			
Replace battery!		■ ■ ■	
BAR	O2	HDD	HE LVL
---	21%	57.5h	L5



⚠ WARNING

Starting a dive when the **REPLACE BATTERY** message is displayed can cause the computer to fail during the dive. Replace the battery as soon as you notice this message.


Low-battery situations during a dive are described in section 3.2.6.

See Chapter 5 for information on how to replace the battery.


1.8 Screen configuration options (patent pending)

In dive mode, Galileo displays data in one of three preconfigured screen layouts: **CLASSIC**, **LIGHT** or **FULL**.

- The **CLASSIC** configuration is set as default and shows all standard information needed during the dive; this layout can be chosen with or without a grid separating the various fields;
- the **LIGHT** configuration maximizes the size of the displayed data by focusing on only the absolutely necessary information;
- the **FULL** configuration maximizes the amount of information displayed.

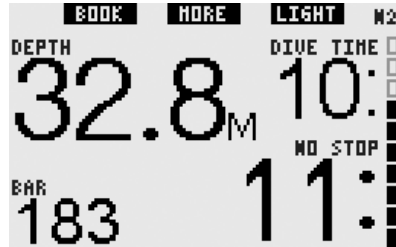


Galileo also has a gauge mode, with a corresponding **GAUGE** configuration, in which the computer acts as a digital depth gauge and does not perform any decompression calculation.

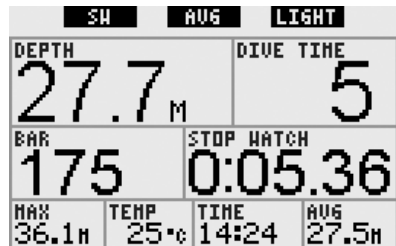

👉 NOTE:

The **LIGHT** configuration does not support dives with MB level stops and decompression stops. In these cases Galileo automatically switches to the **CLASSIC** configuration.

For all three configurations and in gauge mode it is possible to call up the digital compass at any time during the dive. It is also possible to rotate the entire screen by 180 degrees, so that the computer can be worn with the buttons on the top or on the bottom.

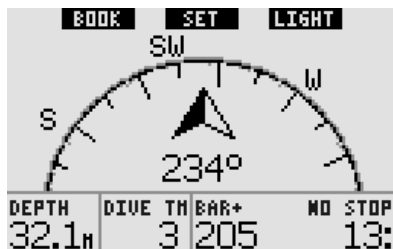

1.9 Button operation

Galileo has three buttons. These buttons allow to access menus and change settings while in surface mode. During the dive they set bookmarks, allow to display further information on the computer screen and to activate the backlight. Each button can perform two tasks, depending on whether it is **pressed** or **pressed and held** (see definition in glossary in section 1.1).

The abbreviated description on the display under each button refers to its function when **pressed**. The function performed by **pressing and holding** each button is described only in the manual.

1.10 Button functions on the surface

Pressing the “MENU” button gives access to the list of menus. **Pressing and holding** the “MENU” button jumps straight to the oxygen setting menu.

Pressing the “LOG” button jumps straight to the logbook menu. **Pressing and holding** the “LOG” button brings up the gas summary table, followed by the picture-viewing function.

Pressing the “LIGHT” button activates the backlight. **Pressing and holding** the “LIGHT” button accesses the digital compass.

	Left button (MENU)	Middle button (LOG)	Right button (LIGHT)
Press	Main menu	Logbook	Activate backlight
Press and hold	Oxygen setting	Gas summary table, then picture viewing function	Digital compass

1.11 Mounting and pairing of the high-pressure transmitter


Galileo can receive tank pressure information via patented interference-free communication from the UWATEC Smart high pressure transmitter. The transmitter needs to be mounted on a high-pressure port of a first-stage regulator.

To mount the transmitter, first remove the high-pressure port plug from the first stage regulator, then screw the transmitter in place.

 **NOTE:**

- Do not hold the transmitter by the plastic cap.
- Use an appropriate wrench to tighten the transmitter.

The Smart transmitter communicates via radio frequency with Galileo. For best transmission, we recommend positioning the transmitter as described in the pictures below.

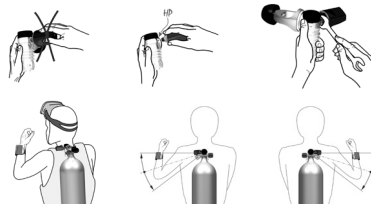

In order for Galileo to display the pressure signal from a Smart transmitter,


first a coded, interference-free line of communication has to be established. This step has to be performed only once for each transmitter or when the battery in the transmitter is replaced.

To pair Galileo to a transmitter proceed as follows:

- Mount the first-stage regulator with the Smart transmitter on a full tank.
- Turn on Galileo, ensure it is in the **time of day** display and place it in direct contact with the transmitter.
- Open the tank valve.



Upon pressurization, the Smart transmitter sends a pairing sequence to Galileo. When Galileo receives this information, the display changes to show a listing of 2 tank designations. The tank designations are **T1** and **BUDDY**. Tank **T1** is your main tank. The **BUDDY** designation allows you to receive tank pressure information from your dive buddy's Smart transmitter (if equipped with one) and to display it on the screen of your Galileo (see chapter 3 for more information).

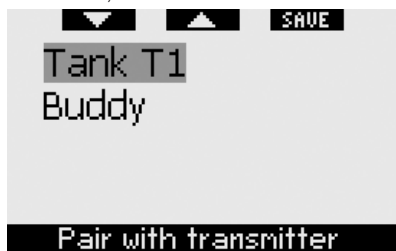

Use the “▼” (left) and “▲” (middle) buttons to select the tank that you want to pair to the transmitter, then **press “SAVE”** (right button). Galileo will confirm the pairing with the message **PAIRING TO T1 SUCCESSFUL** (or **BUDDY**). If you do not wish to complete the operation, **press and hold** the right button and Galileo will show

the message **PAIRING CANCELLED**. The pairing will also be cancelled if you do not **press “SAVE”** within 3 minutes.



NOTE:

- The transmitter must have been unpressurized for at least 40 seconds prior to the pairing operation, else it will not transmit the pairing sequence.
- A transmitter can only be paired to one tank designation. If you pair the same transmitter to a second tank designation, the first one will be erased. However you can pair more than one Galileo to the same transmitter.
- Pairing between Galileo and a transmitter can be removed via SmartTRAK.

After a successful pairing of T1 to Galileo, the display will show the tank pressure in either **BAR** or **PSI**. If tank T1 has not been paired, Galileo will show **NO P** instead of a pressure value. If T1 has been paired but Galileo is not receiving any signal, it will show - - - instead of a pressure value.



On the surface, the status of the **BUDDY** tank is shown in the gas summary table, discussed in section 1.12.

☞ NOTE:


- The Smart transmitter has a range of approximately 1.5m/5ft.
- To maximize the life of the battery, the transmitter turns itself off when there is no pressure change for more than 40 seconds. It also turns itself off when the pressure is 14bar/200psi or less.
- If a transmitter battery is weak, Galileo alerts you with a screen message referencing the tank designation assigned to the transmitter in question.



See Chapter 5 for information on how to replace the battery.

1.12 Gas summary table

Galileo features a **Gas summary table**, which shows tank pressure, oxygen concentration, ppO₂max and MOD for your tank and, if applicable, the tank pressure of your buddy. This allows you to have a quick overview on the surface before starting the dive.

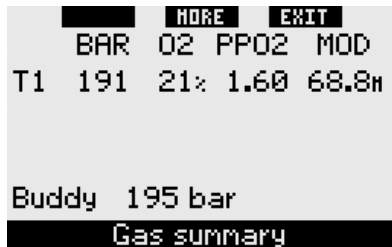

☞ NOTE:

In order to receive tank information, the pertinent transmitters must be on and within range (1.5m/5ft) of your Galileo.

The **Gas summary table** can be reached from the **Gas integration** menu (see section 2.8.2) or simply by **pressing and holding** the middle button (marked “LOG”) while in **time of day** display.

1.13 PDIS

1.13.1 Introduction to PDIS (Profile-Dependent Intermediate Stop)

The main purpose of a dive computer is to track your nitrogen uptake and recommend a safe ascent procedure. Diving within the so called no-stop limits means that at the end of the dive you can ascend directly to the surface, albeit at a safe ascent rate, while for dives outside of the no-stop limit (so-called decompression dives), you must perform stops at certain depths below the surface and allow time for excess nitrogen to be expelled from your body before finishing the dive.

In both cases, it can be beneficial to stop for a few minutes at an intermediate depth between the maximum attained depth during the dive and the surface or, in case of a decompression dive, the first (deepest) decompression stop.

An intermediate stop of this kind is beneficial as soon as the ambient pressure at that depth is low enough to ensure that your body is predominantly offgassing nitrogen, even if under a very small pressure gradient. In such a situation, you can still cruise along the reef and enjoy the dive, while your body gets a chance to slowly release nitrogen.

In recent times, so called “deep” stops have been introduced in some dive computers and tables, defined as half the distance from the maximum reached depth and the surface (or the lowest decompression stop). Spending 2 or 15 minutes at

30m/100ft would result in the same deep stop of 15m/50ft.


With PDIS, as the name suggests, Galileo interprets your dive profile and suggests an intermediate stop that is a function of your nitrogen uptake so far. The PDI stop will therefore change through the course of the dive to reflect the continuously changing situation in your body. Along the same lines, PDIS will account for the accumulated nitrogen from previous dives, hence PDIS is also repetitive-dive dependent. Conventional deep stops completely ignore these facts.

The following figure quantifies the extent of PDIS and illustrates its dependence on cumulative nitrogen uptake for two sample dive profiles. This figure also demonstrates the conceptual difference between PDIS and the rather rudimentary “deep” stops.

Specifically, the figure compares two dive profiles to a maximum depth of 40m/132ft but otherwise very different. Profile 1 stays at 40m/132ft for 7 minutes, then ascends to 30m/100ft for 3 minutes, followed by 12 minutes at 20m/65ft. Profile 2 stays less than two minutes at 40m/132ft, then

ascends to 21m/69ft and stays there for 33 minutes. Both dive profiles are no-stop dives to the limit of entering decompression. The solid line with triangles represents the PDIS depth as displayed on the computer screen during the course of the dive for profile 1, the dotted line with triangles represents the PDIS depth as displayed on the computer screen during the course of profile 2. One can see that the displayed PDIS depth increases as more nitrogen is accumulated in the body, but does so very differently in the two dives due to the different exposure in the two profiles. The PDI stop is carried out at 25 minutes for profile 1 and at 37 minutes for profile 2, followed by the safety stop at 5m/15ft.

The solid line with open circles on the other hand represents the depth that would be displayed by a computer following the conventional deep stop method, and it would be the same for the two dive profiles. Deep stops completely ignore any facts about the dives themselves aside for the max depth.

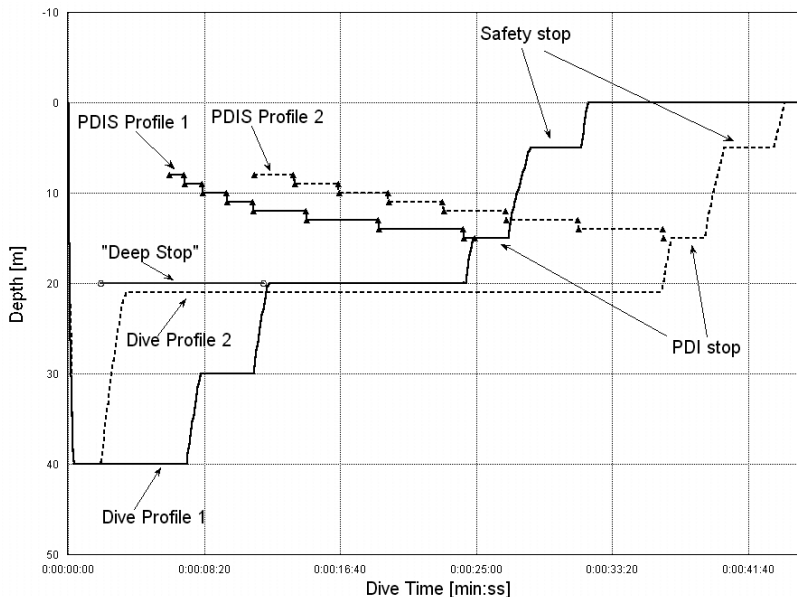

1.13.2 How does PDIS work?

The mathematical decompression model in Galileo, called ZH-L8 ADT MB PMG, tracks your decompression status by dividing your body into 8 so-called compartments and mathematically following the uptake and release of nitrogen in each with the appropriate laws of physics. The various compartments simulate parts of your body such as central nervous system, muscles, bones, skin and so on.

The depth of the PDI stop is calculated as that at which the leading compartment for the decompression calculation switches from on-gassing to off-gassing, and the diver is advised to perform a 2-minute stop **above** the displayed depth (this is the opposite of a decompression stop, where you are asked to remain just **beneath** the displayed depth). During this intermediate stop, the body is not taking up any more nitrogen in the leading compartment, but rather releasing nitrogen (though under a very small pressure gradient). This, combined with the relatively high ambient pressure, inhibits bubble growth.

It should be noted that the two fastest compartments, with 5 and 10 minutes half times respectively, are not considered for the determination of the PDI stop depth. This is due to the fact that these compartments are only "leading" for very short dives, for which an intermediate stop is not required at all.

 **NOTE:**

The PDI stop is not a mandatory stop and it is *NOT* a substitute for the 3-5 minute safety stop at 5m/15ft.

WARNING

Even when performing a PDI stop, you still MUST perform a safety stop at 5m/15ft for 3 to 5 minutes. Performing a 3 to 5 minute stop at 5m/15ft at the end of any dive is still the best thing you can do for yourself!

1.13.3 Special considerations when diving with more than one gas mixture (PMG)

Switching to a higher oxygen concentration mix during the dive influences the PDI stop. This needs to be accounted for, in line with the predictive nature of multigas handling in ZH-L8 ADT MB PMG.

When diving with more than one gas mixture, Galileo displays the PDIS depth according to the following rules:

- if the PDI stop calculated for the bottom mix (gas 1) is deeper than the switch depth, than this calculated value is displayed;
- if the PDI stop calculated for gas 1 is shallower than the switch depth to the next gas (gas 2 or gas d), then the displayed PDI stop is a function of the next gas.

In case of a missed gas switch, Galileo reverts to the PDI stop for the actively breathed mix.

1.14 Turning off Galileo

Galileo turns off automatically after 3 minutes without operation. When in **time of day** display, it can also be turned off manually by **pressing and holding** the left and right buttons simultaneously.

2. MENUS, SETTINGS AND FUNCTIONS

Galileo's menus allow you to access functions or to change settings. To access the main menu **press "MENU"**. From here, you can scroll through the entire list by **pressing** the "▼" (left button) or "▲" (middle button). Some menus, such as **Dive settings**, have submenus. In every menu or submenu, the highlighted section indicates the currently active entity. Listed below are all available menus.

Menu	Description	Page
O ₂ setting	Allows to set the oxygen concentration (Nitrox), the ppO ₂ max and to view the MOD.	19
Dive settings	Allows to set all dive-related parameters: MB level, gauge mode, safety stop timer, ppO ₂ max, Nitrox reset time, water type. It also allows to reset the desaturation and to turn on the all-silent mode.	20
Digital compass	Allows to use the compass on the surface, to set the auto-off time and also to set a declination value to correct between magnetic North and true North.	23
Altimeter	Shows altitude and allows to set altitude with respect to a known reference.	24
Warning settings	Allows to turn on or off the warning messages individually.	25
Clock settings	Allows to set the wake-up alarm, time, time format, date and time zone (UTC).	33
Other settings	Allows to set the parameters for the gas integration, the duration of the backlight time, to change the contrast of the display, to change the IrDA speed, to toggle the water contacts on and off, and to reset all settings from all menus to the factory defaults. It also shows information about the software and hardware of the dive computer.	34
Personalization	Allows to set the screen configuration, the language, the start-up picture, the unit system, the workload estimation, to show the owner information and the emergency message.	37
Pictures	Allows to display all the pictures stored on the dive computer. The pictures must be uploaded from a PC via SmartTRAK.	39
Dive planner	Allows to plan no-stop or decompression dives with freely selectable surface intervals.	39
Logbook	Allows to review your past dives.	40

2.1 Main menu description

Press “MENU” to view the list of menus.

To enter any menu, scroll up or down the list via the “▲” or “▼” buttons until the highlighted bar covers your menu of interest, then **press** “ENTR” to confirm your choice.




To change settings **press** the “+” or “-” buttons, then **press** “SAVE” to confirm the changes. This will take you back to the main menu. If you do not want to confirm the changes, **press and hold** the right button at any time to exit without saving the changes. This will also take you back to the main menu. **Press and hold** the left and the right button simultaneously to jump back to the **time of day** display. Note that holding down the “+” or “-” buttons makes the setting change faster.



If you make a change in any menu and you save it, the computer will display the message **CHANGES SAVED** for 2 seconds. If you make a change and do not save it, the computer will display the message **CHANGES NOT SAVED** for 2 seconds. If no changes were made, whether you exit by means of a **press** or a **press and hold**, no message is displayed.




If more than one entity can be changed within a single menu, the right button is labeled “>>” instead of “SAVE”. **Pressing** “>>” will move the highlighted segment to the next entity that can be changed. When the highlighted segment is on the last possible entity that can be changed, the right button reverts back to “SAVE”. In case of submenus, the operation follows the same process.

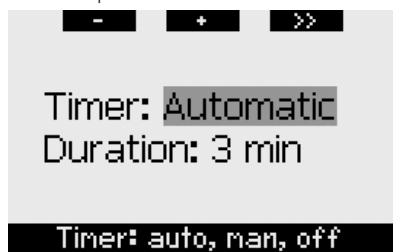

If in the middle of changing a setting the computer does not receive any input for a period of 3 minutes, it will automatically switch back to the **time of day** display without saving any changes.

2.2 Setting the oxygen concentration

Upon entering this menu, the current oxygen concentration (O₂%) will be highlighted. Underneath the O₂% you can see the ppO₂ and the corresponding MOD. After changing the oxygen concentration, the ppO₂ will be highlighted. You can change its value between the maximum allowed value (see section 2.3.4) and **1.0bar**. As you change the ppO₂ value, the MOD changes accordingly. Note that the MOD is also a function of water type (salt or fresh) and of atmospheric pressure (and hence altitude).

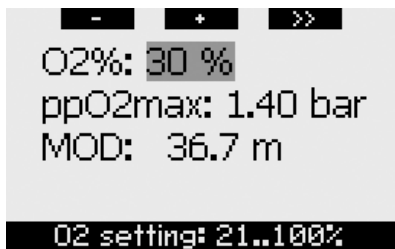

! WARNING

- Diving with Nitrox may only be attempted by experienced divers after proper training from an internationally recognized agency.
- Before every dive and after changing the tank, you must make sure that the set oxygen concentration in Galileo corresponds to the oxygen concentration in the tank. Setting the wrong oxygen concentration can lead to serious injury or death.

2.3 Dive settings




2.3.1 MB level (default: L0)

Upon entering this menu, the currently active MB level is displayed. Using the “+” and “-” buttons you can change between levels, from **L0** (baseline algorithm) to **L5** (highest level of added conservatism).



2.3.2 Gauge mode (default: OFF)

Upon entering this menu, the words **ON** or **OFF** will be highlighted on the screen, indicating whether the gauge mode is active (**ON**) or inactive (**OFF**). If the gauge mode is inactive, Galileo will function as a dive computer. If the gauge mode is active, Galileo does not carry out any decompression calculation and does not provide any warnings or alarms.

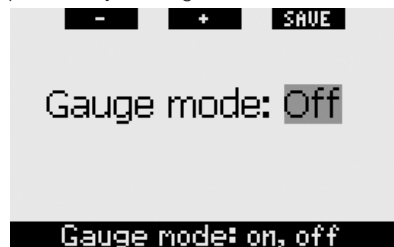

See section 3.8 for restrictions on setting Galileo from computer mode to gauge mode and vice versa.

2.3.3 Safety stop timer (default: automatic, 3 minutes)

The purpose of the safety stop timer is to allow you to monitor your safety stop at the end of the dive. You can set the duration of the safety stop timer between **1** and **5** minutes in 1 minute increments. You can also set the timer to be triggered **automatically** or **manually** or you can turn the function **OFF** altogether. The operation of the safety stop timer is described in section 3.4.3.




2.3.4 ppO₂max (default: 1.4bar)

The value of ppO₂max determines your MOD-based on your oxygen mix. You can set this value between **1.2bar** and **1.6bar** or **OFF**.



If you set ppO₂max to **OFF**, you will not get any MOD warnings. If you choose **OFF**, you will be required to enter an additional confirmation in the form of a safety code. The safety code is **313**. This prevents unintentionally setting the ppO₂max to **OFF**. To enter the code, use the “+” and “-” buttons to define the first digit (**3**), then press “>>” to confirm it. Now define the next digit (**1**), confirm by pressing “>>”, then define the last digit (**3**). Upon pressing “SAVE” after having defined the last digit, ppO₂max will be set to **OFF** and you will have no related warnings. The display shows the message **ppO₂max SET TO OFF SUCCESSFUL** for 2 seconds.

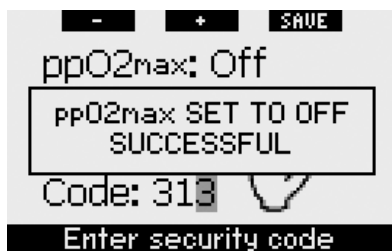

⚠ WARNING

Setting the ppO₂max value to **OFF** can result in exposure to high levels of oxygen partial pressure and can result in serious injury or death.


2.3.5 Nitrox reset time (default: no reset)

If you set the computer to an oxygen concentration higher than 21% (diving with Nitrox), you can decide whether the computer should revert back to 21% (air) at some point in time or if it should stay set to the given oxygen concentration until you change it manually. This is done via the Nitrox reset time. If you set the Nitrox reset time to **NO RESET**, the computer will maintain the given oxygen concentration until you change it manually. If you set the Nitrox reset time to any value between **1 hour** and **48 hours**, the computer will automatically change the oxygen concentration back to 21% after the specified time interval has elapsed.



2.3.6 Water type (default: salt)

You can set the computer for **fresh** water or **salt** water calibration, depending on where you intend to dive. Setting the wrong water type entails an error in depth measurement of approx 3% (i.e. at a depth of 30m/100ft, a computer set to salt water will show 29m/97ft in fresh water whereas a computer set to fresh water will show 31m/103ft in salt water). Note that this does not affect the proper functioning of the computer, since the computer performs all of the calculations based purely on pressure measurements.

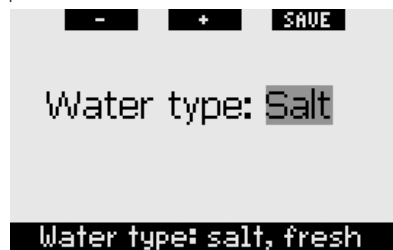

2.3.7 Desaturation reset

Galileo allows you to reset the desaturation in the computer. Any tissue saturation information from a recent dive will be reset to zero and the computer treats the next dive as a non-repetitive dive. This is useful when the computer is loaned to another diver who has not dived in the last 48 hours.

WARNING

Diving after having reset the desaturation is extremely dangerous and is very likely to cause serious injury or death. Do not reset the desaturation unless you have a valid reason to do so.

To prevent accidental desaturation reset, you must enter the safety code once you decide to proceed with the reset. The safety code is **313**. Once inside the menu the word **CODE** will appear. To enter the code, use the “+” and “-” buttons to define the first digit (**3**), then press “>>” to confirm it. Now define the next digit (**1**), confirm by pressing “>>”, then define the last digit (**3**). Pressing “SAVE” after having defined the last digit will complete the desaturation process. The display shows the message **DESATURATION RESET SUCCESSFUL** for 2 seconds. Note that the reset of the desaturation is entered into the logbook for tracking purposes.

NOTE:

Removing and replacing the battery will not reset the desaturation. Galileo stores tissue saturation information in non-volatile memory. For the time during which the computer is without battery, the desaturation calculation is frozen and resumes from where it had left off as soon as a new battery is installed.





2.3.8 All-silent mode (default: OFF)

In this menu you can turn off the sound so that the computer will not beep under any circumstance. Setting the **ALL-SILENT** mode to **ON** overrides any setting you choose for individual warnings (described in section 2.6) and also mutes all alarms (described in section 3.2). The wake-up alarm will also be disabled.

WARNING

Muting all alarms can lead you into potentially dangerous situation and could result in serious injury or death.

If you choose **ALL-SILENT ON**, you will be required to enter an additional confirmation in the form of a safety code. The safety code is **313**. This prevents unintentionally setting the **ALL-SILENT** to **ON**. To enter the code, use the “+” and “-” buttons to define the first digit (**3**), then press “>>” to confirm it. Now define the next digit (**1**), confirm by pressing “>>” then define the last digit (**3**). Upon pressing “SAVE” after having defined the last digit, **ALL-SILENT** will be set to **ON** and you will have no audible signals of any kind. The display shows the message **ALL-SILENT ON SUCCESSFUL** for 2 seconds.

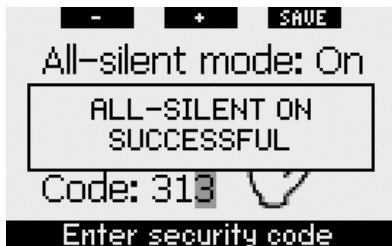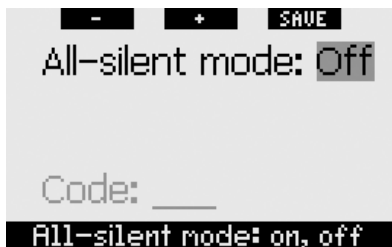

2.3.9 PDIS mode (default:OFF)

“Upon entering this menu the words ON or OFF will be highlighted on the screen indicating whether the PDIS mode is active (ON) or inactive (OFF).

If the PDIS mode is inactive Galileo will give no PDIS information.

If the PDIS mode is active Galileo does carry out the PDIS calculation.


See section 1.13 for use of PDIS.

! WARNING

Even when performing a PDI stop, you still **MUST** perform a safety stop at 5m/15ft for 3 to 5 minutes. Performing a 3 to 5 minute stop at 5m/15ft at the end of any dive is still the best thing you can do for yourself!

2.4 Digital compass

Galileo has a tilt-compensated digital compass which can be used at almost any inclination. The compass can be called up at any moment during the dive and it can also be used on the surface. This menu allows you to use the compass on the surface, change the auto-off time and assign a declination to compensate for the deviation between true North and magnetic North.

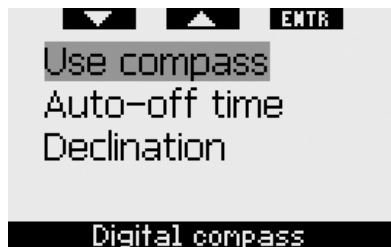


2.4.1 Using the compass on the surface

Upon selecting the **USE COMPASS** menu, the screen will display the compass, the time of day and the surface interval, if applicable. The buttons are now labeled “**SET**” and “**EXIT**”.

With the middle button (“**SET**”), you can set a reference bearing. This is useful for instance if you are on a boat and there is a landmark on the shore that you can use for alignment to reach a specific spot on that dive site. Press “**SET**” to set the bearing, and the display shows the message **SET BEARING SUCCESSFUL** for 2 seconds. A dot will appear to indicate the set bearing. Once underwater, align the dot with the arrow and start swimming in that direction. If you press “**SET**” again, the new bearing will override the one in memory. If you **press and hold** “**SET**” you erase the bearing. When you set a bearing, Galileo automatically marks the points at 90, 120 and 180 degrees as an aid in navigation. See section 3.4.1 for more information on using this feature.

The right button (“**EXIT**”) returns to the main **Digital compass** menu.

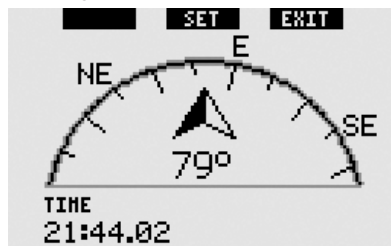




2.4.2 Setting the auto-off time (default: 15 seconds)

While diving, the compass layout replaces the main dive computer screen configuration when the right button is **pressed and held**. When in compass mode, Galileo uses more battery energy than normal, so it is desirable to have the computer switch back to the regular configuration after a certain time interval. This menu allows you to set this time interval between **5, 10, 15, 30** and **60** seconds or to **PUSH ON/PUSH OFF**. In this last setting, the compass layout remains on the screen until you **press and hold** the right button to revert to the regular dive computer screen configuration.


NOTE:

- If a warning or an alarm is triggered while in compass mode, Galileo switches back to the regular layout regardless of the auto-off setting.
- If Galileo is in compass mode when it enters level stops or decompression, it also switches back to the regular layout regardless of the auto-off setting.

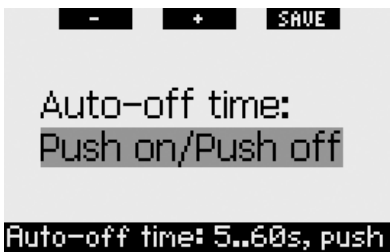

2.4.3 Setting the declination (default: 0 degrees)

Depending on the exact location on the planet, there can be a deviation between true North and magnetic North. Any compass will always show magnetic North, so via this menu you can set a value for the so-called declination that will make the compass show true North instead.

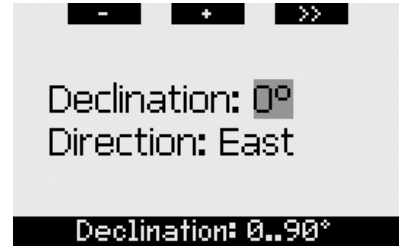


2.5 Altimeter

This menu allows you to use Galileo as an altimeter. Upon entering this menu, the current altitude is displayed. Altitude is interpreted by the computer from the measured barometric pressure and, as such, it is strongly dependent on the weather. Consequently, for accurate altitude measurements, the altimeter has to be set to a known altitude at least once a day.



To set the altitude, first **press** "ADJ" to enter the **ADJUST ALTITUDE** menu. Once inside this menu, use the "+" or "-" buttons until you reach the desired value. Each time you **press** "+" or "-", the displayed altitude will change in 10m/50ft increments. **Press** "SAVE" to confirm your choice and return to the main **Altimeter** menu.

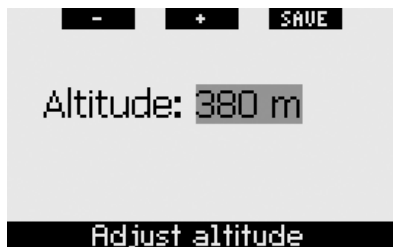



 NOTE:

The altitude shown in this menu has no influence on the automatic altitude adjustment in the decompression calculations.

2.6 Warning settings


Galileo can warn you about specific situations that might require an action on your part.

Warnings represent situations that require the diver's attention, but ignoring them does not represent an immediate risk. It is up to you to decide which ones you would like to be active and which ones not. All warnings can be **OFF**, **VISUAL** only, **AUDIBLE** only, or **BOTH** visual and audible. The audible warning consists of three short sequences of beeps. The visual warning is described independently for each case.

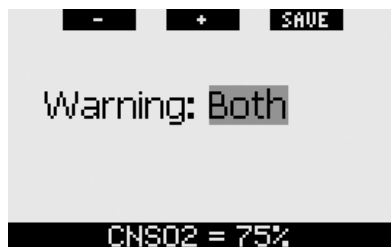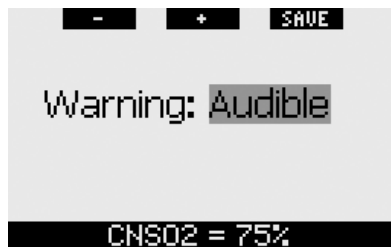

If a warning is set to **VISUAL** or **BOTH** and it is triggered while Galileo is in compass mode, the display will automatically switch back to the regular configuration (**CLASSIC**, **LIGHT** or **FULL**) in order to properly show the warning message.

Each warning has its own submenu within the **Warning settings** menu. Use the “▲” or “▼” buttons to scroll through the list. A highlighted bar will show the selected submenu and the hint line at the bottom indicates the status of the warning. **Press “ENTR”** to access any submenu. At any point in time **pressing and holding** the right button will return to the **Warning settings** menu without saving any unconfirmed changes.

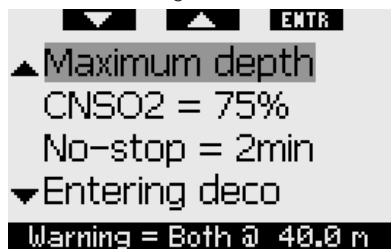

WARNING

Galileo also features alarms. Alarms differ from warnings in that they cannot be turned off, and that their audible sequence is continuous until the situation is corrected. These are described in section 3.2. Alarms have priority over warnings, and warnings will not be displayed as long as an alarm is active.

2.6.1 Maximum depth (default: OFF)


Galileo allows you to specify a depth at which a warning is activated. The warning can be set in 1m/5ft increments.




During the dive, if you descend below the set depth and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **MAX DEPTH REACHED** for 12 seconds in place of the no-stop or decompression information.

In addition:


- For the **CLASSIC** configuration, the value of the set depth is shown, in inverted colors (white on a black background), in the lower left corner. Alternate information is still available as described in section 3.3.2 but after 5 seconds the inverted set depth is shown again. This will remain so for as long as the diver stays deeper than the set depth.

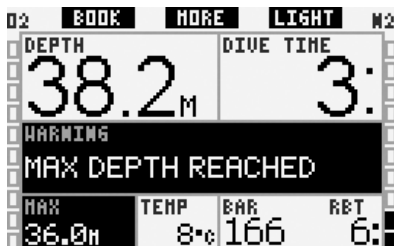

- For the **LIGHT** configuration, the current depth is displayed in inverted colors (white on a black background) and will remain so until the diver ascends above the set depth.

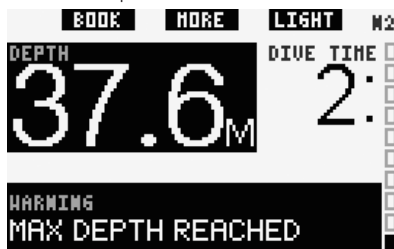


- For the **FULL** configuration, the value of the set depth replaces the max depth indication and is shown in inverted colors (white on a black background). This will remain so until the diver ascends above the set depth.

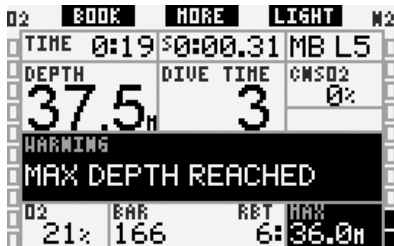

2.6.2 CNS O₂ = 75% (default: OFF)

Galileo tracks your oxygen uptake during the dive via the CNS O₂ clock. This can be monitored via the oxygen bar on the left side of the screen (**CLASSIC** and **FULL** display configurations) and also via the CNS O₂ indication (**CLASSIC**, **LIGHT** and **FULL**). Galileo triggers an alarm when the value reaches 100%; in addition you can


choose to have a warning triggered when the CNS O₂ clock reaches 75%.

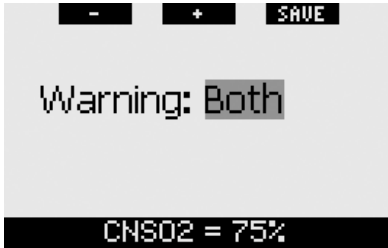


During the dive, if the calculated CNS O₂ value reaches 75% and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **CNS O₂ = 75%** for 12 seconds in place of the no-stop or decompression information.

In addition:


- For the **CLASSIC** configuration, the value of CNS O₂ is shown, in inverted colors (white on a black background), in the lower left corner. Alternate information is still available as described in section 3.3.2 but after 5 seconds the inverted CNS O₂ is shown again. This will remain so for as long as the CNS O₂ value is higher than 75%.

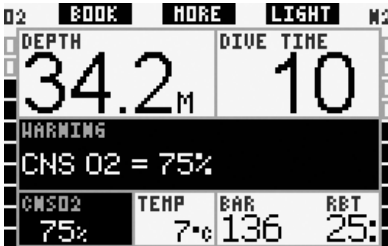

- For the **LIGHT** configuration, after the text message extinguishes the CNS O₂ is displayed in inverted colors (white on a black background) in the lower left corner, alternating every 4 seconds with the tank pressure information. This will remain so for as long as the CNS O₂ value is higher than 75%. Alternate information is still available as described in section 3.3.3.

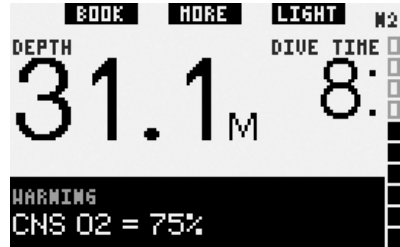


- For the **FULL** configuration, the CNS O₂ is shown in inverted colors (white on a black background). This will remain so for as long as the CNS O₂ value is higher than 75%.

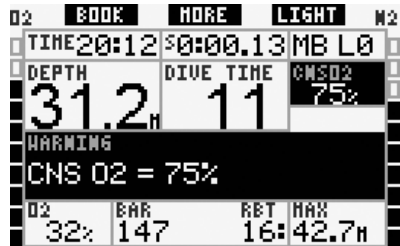

2.6.3 No-stop = 2 minutes (default: OFF)

If you wish to avoid unintentionally performing a decompression dive, Galileo can activate a warning when the no-stop time reaches 2 minutes. This applies to both L0 no-stop and MB no-stop time (see section 3.5 for more information on MB level diving). It gives you the opportunity to start ascending before incurring a decompression stop or a level stop obligation.

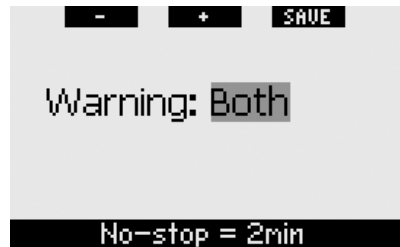

During the dive, if the no-stop time reaches 2 minutes and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **NO STOP = 2 minutes** on the

display for 12 seconds. The following figures show the actual display in the various dive configurations (**CLASSIC**, **LIGHT** and **FULL**).



2.6.4 Entering decompression (default: OFF)

Galileo can activate a warning when the first mandatory decompression stop appears. This alerts the diver to the fact that a direct ascent to the surface is no longer possible. This warning applies to dives with the computer set to L0 only.



During the dive, if you are about to enter decompression and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **ENTERING DECO** on the display for 12 seconds. The following figures show the actual display in the **CLASSIC** and **FULL** configurations. If Galileo was set to **LIGHT**, at this point it switches to **CLASSIC** to fit all the information.



2.6.5 Dive time and turn-around time (default: OFF)

With Galileo you can set a given dive time in 5 minute increments. At half of the set value, Galileo will give you a “turn around” warning. A warning is also triggered when the total set time has elapsed.



During the dive, if the dive time reaches half the value of the set dive time and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **TURN-AROUND TIME** on the display for 12 seconds. The

following figures show the actual display in the various dive configurations (**CLASSIC**, **LIGHT** and **FULL**).




When the actual dive time reaches the set dive time, the message **TIME LIMIT REACHED** appears for 12 seconds and the dive time itself now is shown in inverted colors (white on a black background). The following figures show the actual display in the various dive configurations (**CLASSIC**, **LIGHT** and **FULL**).



2.6.6 Tank pressure (default: OFF)

Galileo can warn you when the tank pressure reaches a certain level. For instance, you can set it to half the full tank pressure as a reminder that it is time to start a slow ascent.

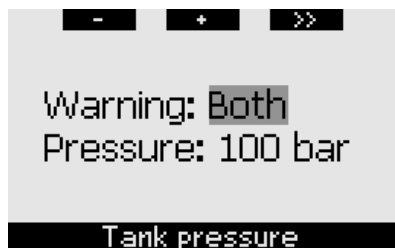


During the dive, if the tank pressure reaches the value set in the menu and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message "**value** BAR (or PSI) **REACHED**" on the display for 12 seconds. The following figures show the actual display in the various dive configurations (**CLASSIC**, **LIGHT** and **FULL**).




2.6.7 RBT = 3 minutes (default: BOTH)

In order to give you sufficient warning that your gas supply may be running low, Galileo can warn you when the RBT (remaining bottom time) drops to 3 minutes. See section 3.3.1 for more information on RBT.

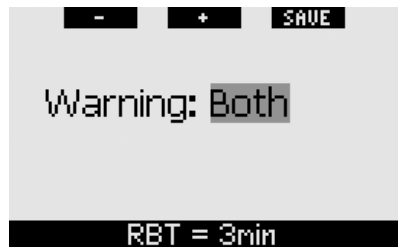

During the dive, if the RBT drops down to 3 minutes and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **RBT = 3 MIN** on the display for

12 seconds. In addition, regardless of the setting, the RBT is displayed in inverted colors (white on a black background). The following figures show the actual display in the various dive configurations (**CLASSIC**, **LIGHT** and **FULL**).

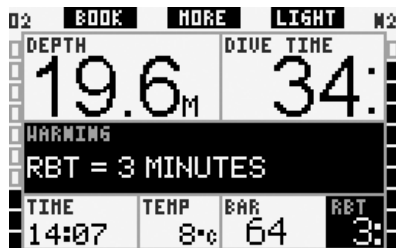

⚠ WARNING

If RBT drops to 3 minutes or less, you may not have enough gas supply to complete a safe ascent. Start ascending when you see this warning.


2.6.8 Pressure signal (default: BOTH)

Galileo relies on RF communication with the Smart transmitter for tank pressure information. Under certain circumstances, such as inappropriate positioning of the transmitter or interference from strong RF sources, the data transmission can be momentarily interrupted. Strobes used

in underwater photography for example are known to momentarily affect the communication between Galileo and the Smart transmitter.

Galileo can warn you when the signal from the transmitter is disturbed:

- If Galileo receives no signal from the transmitter for 30 seconds, an audible sequence goes off and the message **NO PRESSURE SIGNAL** appears on the display for 12 seconds.
- If after another 40 seconds Galileo still has not received any signal from the transmitter, another audible sequence goes off and the message **PRESSURE SIGNAL LOST** appears for 12 seconds, after which the RBT is not displayed any longer and the tank pressure is replaced with --- .

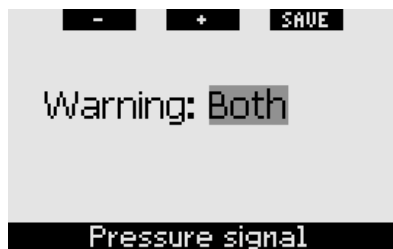

2.6.9 Entering level stops (default: OFF)

When diving with a microbubble (MB) level different than L0, Galileo can warn you when you are no longer in the MB no-stop phase.

See section 3.5 for more information on MB level diving.




During the dive, when you are about to enter the level stop phase and the warning is set to either **VISUAL** or **BOTH**, Galileo

will show the message **ENTERING LEVEL STOPS** on the display for 12 seconds. The following figures show the actual display in the **CLASSIC** and **FULL** configurations. If Galileo was set to **LIGHT**, at this point it switches to **CLASSIC** to fit all the information.




2.6.10 MB stop ignored (default: BOTH)

When diving with an MB level higher than L0 and in the presence of MB level stops, Galileo can warn you if you reach a depth shallower than the deepest required MB level stop, therefore allowing you to avoid missing the required stop.

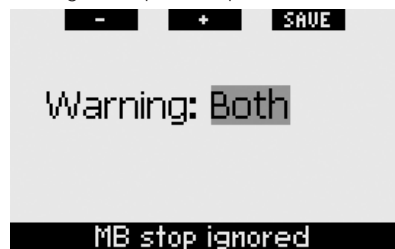


During the dive, if you ascend shallower than a suggested MB stop depth and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **MB STOP IGNORED** on the display for 12 seconds and the depth is shown in inverted colors

(white on a black background) until you descend below the stop depth or until there is an MB level reduction (see section 2.6.11 and 3.5.5). The following figures show the actual display in the **CLASSIC** and **FULL** configurations.

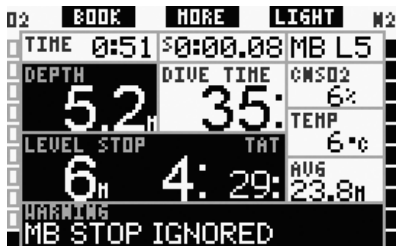

2.6.11 MB level reduced (default: BOTH)

When diving with an MB level higher than L0 and in the presence of MB level stops, if you ascend more than 1.5m/5ft above the deepest required MB level stop, Galileo reduces your MB level to the next possible level. The display will show the new active MB level. You can set Galileo to warn you when this happens.

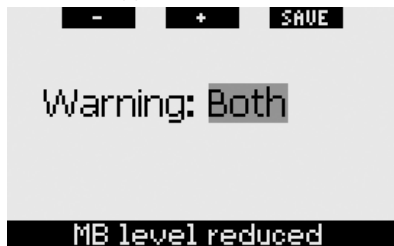

During the dive, if you ascend more than 1.5m/5ft above a suggested MB stop depth and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **MB LEVEL REDUCED** on the display for

12 seconds. In addition, regardless of the setting of the warning, the new MB level is displayed in inverted color (white on a black background) as follows:


- **CLASSIC**: in the lower left corner after the text message extinguishes. Alternate information is accessible as described in section 3.3.2, but after 5 seconds the new MB level information is again shown;
- **FULL**: in place of the MB level.

The following figures show the actual display in the **CLASSIC** and **FULL** configurations.




2.6.12 L0 no-stop time = 2 minutes when diving an MB level

When diving with an MB level higher than L0, the underlying L0 information is not directly visible on the display (though it is accessible as alternate information). You can choose to have Galileo warn you when the underlying L0 no-stop time reaches 2 minutes while diving with an active MB level higher than L0.

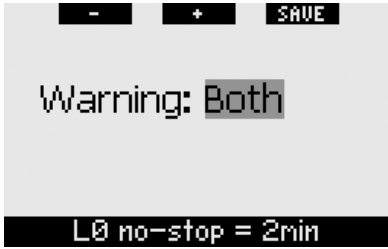

During the dive, if the underlying L0 no-stop time reaches 2 minutes and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **L0 NO-STOP = 2 MIN** on the display for 12 seconds. The following figures show the actual display in the **CLASSIC** and **FULL** configurations.

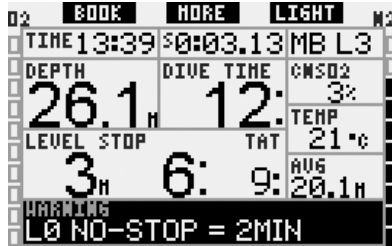

2.6.13 Entering deco when diving an MB level


When diving with an MB level higher than L0, the underlying L0 information is not directly visible on the display (though it is accessible as alternate information). You can choose to have Galileo warn you when you are about to enter a decompression obligation while diving with an active MB level higher than L0.



During the dive, if you are about to enter decompression and the warning is set to either **VISUAL** or **BOTH**, Galileo will show the message **ENTERING DECO AT L0** on the display for 12 seconds. The following figures show the actual display in the **CLASSIC** and **FULL** configurations.



2.7 Clock settings

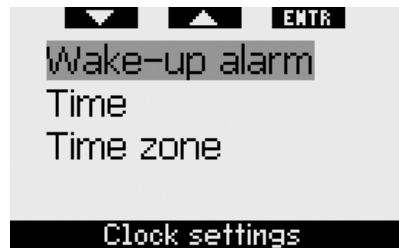

2.7.1 Wake-up alarm



This menu allows you to set a wake-up alarm. The time of the alarm is shown in the format specified in the **Time** menu (either in **AM/PM** or **24 hour**). When the alarm is set to **ON**, a bell symbol appears in the **time of day** display.

2.7.2 Time

This menu allows you to set the time format, time and date.



Pressing "SAVE" at the last setting starts the clock at the set time and 0 seconds.

2.7.3 Time zone (UTC)

This menu allows you to easily change the time when traveling to other time zones. Instead of changing the actual time itself, in this menu you can define a number of hours to add to or to subtract from the currently displayed time so as to get the correct time at your travel destination.



The range of the UTC setting is between 13 hours and +13 hours in 15 minute increments.

2.8 Other settings




2.8.1 Device information

This menu displays the device ID number (**ID**), the hardware version (**HW**), the software version (**SW**), the battery level and the ASIC version. Press "EXIT" to exit this submenu and return to the **Other settings** menu.



2.8.2 Gas integration (default: 40bar/600psi, normal, OFF)

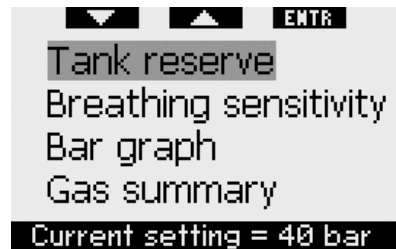


In this menu you can set the tank reserve used for the RBT calculation, you can set the sensitivity of the workload calculation to changes in breathing pattern and you can choose to replace the oxygen bar graph

with a graphic representation of the tank pressure (**CLASSIC** and **FULL** only). From this menu you can also call up the gas summary table described in section 1.12.




The RBT (remaining bottom time) is the time you can spend at the current depth and still have enough gas supply to make a safe ascent and reach the surface with the tank reserve. The RBT calculation is based on your current breathing rate, accounts for any existing and upcoming decompression obligation and for any temperature gradient in the water. It assumes an ascent at the ideal ascent rate (defined in section 3.2.1). A higher value of the tank reserve is more conservative, but limits your diving time. A lower value gives you more diving time but the risk of running out of gas supply before reaching the surface increases.

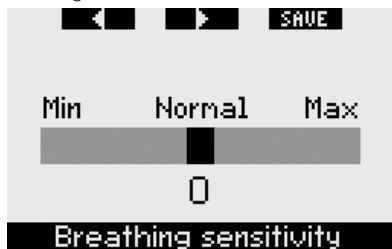

The sensitivity of the workload calculation to changes in breathing pattern can be adjusted in 25 steps: this has an effect on how the algorithm accounts for changes in breathing pattern in the decompression calculation.



The oxygen bar graph can be replaced with a graphic representation of the tank pressure (**CLASSIC** and **FULL** only). If you turn **ON** this feature, the label of the bar graph changes from **O₂** to **TNK**. To use this feature, you must define a value of the pressure when the tank is full. Each segment in the left bar graph then represents one tenth of the full value. For instance, if the pressure of the full tank is 200bar/3,000psi, each segment will correspond to 20bar/300psi. As you consume the gas in the tank, the segments will gradually turn off.

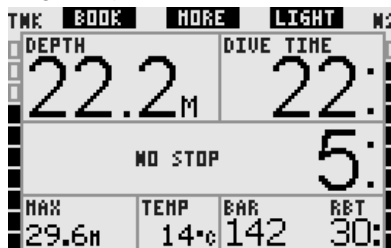

2.8.3 Backlight duration (default: 6 seconds)

You can set the duration of the backlight in dive mode between 2 and 12 seconds or to **PUSH ON/PUSH OFF**. The backlight is activated by **pressing** the “**LIGHT**” button. If you choose **PUSH ON/PUSH OFF**, the light will stay on until you **press** the “**LIGHT**” button again to turn it off.

NOTE:

- The backlight consumes battery energy: the longer the backlight stays on, the shorter the life of your battery.
- If the **LOW BATTERY** warning is activated, it is no longer possible to activate the backlight.



When in surface mode, the light can only be activated from the **time of day** display, when the right button is marked "**LIGHT**". The backlight in surface mode has a duration of 1 minute before automatically switching off, which allows for enough time to navigate through menus and make changes to settings. It can be turned off at any time by **pressing** the "**LIGHT**" button again.


2.8.4 Display contrast

This menu allows you to change the contrast of the display to adapt to various levels of light conditions. Upon entering this menu, a sliding bar appears across the display. Use the "◀" and "▶" buttons to set your preferred contrast level.




2.8.5 IrDA speed (default: FAST)

Galileo can transmit dive profile information from its memory to a PC via an infrared interface. This submenu allows you to choose the speed at which the transfer takes place. On the **FAST** speed setting, the transfer is approximately three times faster than on the **SLOW** setting, but the **SLOW** setting has wider compatibility with various infrared interfaces. We suggest starting with **FAST** and, if that gives trouble, switching to **SLOW**.

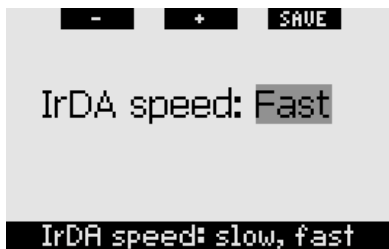

2.8.6 Water contacts (default: ON)

The water contacts allow Galileo to turn on automatically the moment it senses the presence of water. This means that you can jump in the water at any time without having to worry whether the computer is turned on. However, if the computer is stored in a wet environment, it may stay turned on and consume unnecessary battery power. To prevent this, you can turn the water contacts off, but you will have to remember to turn on the computer manually before starting the dive.

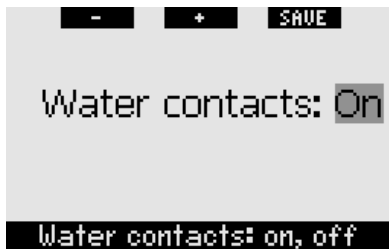

☞ **NOTE:**

If the water contacts are turned off and you fail to turn on the computer manually, the computer will still activate by itself within 1 minute of having started the dive. The time and decompression calculation will be consequently inaccurate, but the accuracy of the depth measurement will be unaffected.

2.8.7 Revert to factory settings

This menu allows you to revert all settings in all menus of the computer back to the original factory settings. In order to do this, you need to enter the safety code (313). This prevents unintentionally reverting all settings. To enter the code, use the “+” and “-” buttons to define the first digit (3), then **press “>>”** to confirm it. Now define the next digit (1), confirm by **pressing “>>”** then define the last digit (3). Upon **pressing “SAVE”** after having defined the last digit, a setup routine is initiated. This allows you to choose the language, units and time zone after which all settings will be reverted to the original factory defaults. The display shows the message **REVERT TO FACTORY SETTINGS SUCCESSFUL** for 2 seconds.



NOTE:

Reverting to factory settings does not cancel existing transmitter pairing information nor does it cancel owner and emergency information.

2.9 Personalization (patents pending)



2.9.1 Screen configuration (default: CLASSIC WITH GRID)

In this menu you can set your preferred display layout, as described in Chapter 1. You can choose between **CLASSIC**, **CLASSIC WITH GRID**, **LIGHT** and **FULL** configurations. You can also rotate the display by 180 degrees, so that the buttons are at the bottom of the computer.



NOTE:

- The **LIGHT** configuration does not support dives with level stops or decompression stops. If you have chosen the **LIGHT** configuration and you enter level stops or decompression, the screen configuration will switch to **CLASSIC** until you have fulfilled all level stop and/or deco stop obligations.

2.9.2 Language

In this menu you can set the language used for all texts displayed on the computer.




2.9.3 Start-up picture (default: Galileo logo)

Galileo allows you to choose a picture that will be displayed for 8 seconds upon turning on the computer. In this menu you choose the picture from those available in the computer memory.



2.9.4 Units

You can choose to have the depth displayed in meters or feet, the temperature in degrees Celsius or degrees Fahrenheit and the tank pressure in bar or psi.

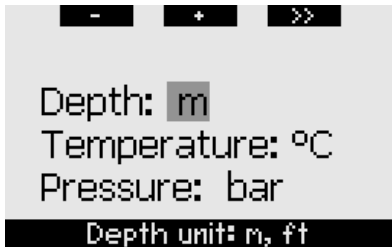

2.9.5 Workload

At the base of any decompression calculation there is the transport of nitrogen from the lungs to the blood and from there to the tissues during on-gassing, and the same again in reverse during off-gassing. As such it is obvious that the single most important parameter in a decompression calculation is the rate at which blood travels through the body. During heavy exercise, the total blood flow from the heart can be up to 4 times higher than while at rest. This increase in blood flow is rather unevenly distributed, with some tissues such as the **C**entral **N**ervous **S**ystem and the brain being unaffected, while others like the muscles receiving up to ten times more blood than at rest.



Galileo estimates the workload based on changes in the breathing pattern as detected by the hoseless high-pressure transmitter, and the decompression calculation in 4 of the 8 compartments in the ZH-L8 ADT model is changed accordingly. This menu allows you to switch off the workload estimation, in which case your Galileo will behave like an UWATEC Aladin PRIME dive computer.

2.9.6 Owner information


The information in this menu can only be entered via the SmartTRAK software. A maximum of twenty lines are allowed. You can scroll through the text using the "▲" and "▼" buttons. The top two lines of this information are displayed in surface mode when there is no remaining desaturation (see section 1.3).



2.9.7 Emergency information

The information in this menu can only be entered via the SmartTRAK software. A maximum of twenty lines are allowed. You can scroll through the text using the “▲” and “▼” buttons.

If Galileo goes into **SOS** mode because of a missed decompression stop, this menu will be displayed if the middle button is **pressed** (see section 1.6).

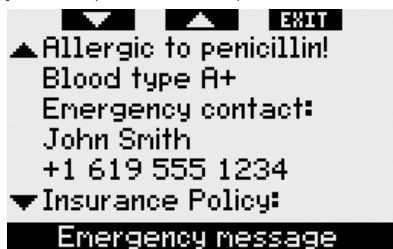

2.10 Pictures

This menu allows you to view all the pictures that have been uploaded via SmartTRAK to your dive computer. You can jump directly to this menu from the **time of day** display by **pressing and holding** the middle (“LOG”) button. Once you are in picture-viewing mode, use the “<<” and “>>” buttons to scroll through the pictures. With the “EXIT” button you can return to the **time of day** display.



2.11 Dive planner

This menu allows you to plan no-stop or decompression dives. Dive planning is done using the following as basis:

- selected oxygen concentration
- selected water type
- selected microbubble level
- water temperature of the most recent dive
- altitude range (if any)
- status of saturation at the time the planner is started
- a normal workload of the diver and observance of the prescribed ascent rates.

If there is remaining desaturation on the computer at the time of starting the dive planner, the text **ADD. SURF. INT.** appears on the display. This allows you to define an additional surface interval to what has already elapsed since the end of the last dive. **Press** the “+” or “-” buttons to define this interval, then **press** “>>” to confirm it. If at present there is a prohibited altitude recommendation due to the last dive, Galileo shows you how the prohibited altitude changes with increasing surface interval. **Press** “>>” directly if you want to plan without an additional surface interval. In case Galileo is displaying the no-dive warning (section 1.5), the duration of the warning itself is displayed as recommended surface interval for planning purposes (rounded up to the nearest 15 minute increment).



2.11.1 Planning a no-stop dive

To plan a no-stop dive, enter a depth using the “+” or “-” buttons (depth will change in 3m/10ft increments): Galileo will show you what the corresponding no-stop time is. Depths greater than the current MOD are not displayed. **Press and hold “>>”** at any time to exit the dive planner and return to the main menu.

NOTE:

*If you have set ppO_2max to **OFF**, the planner will show only depths up to a corresponding ppO_2max value of 1.6bar.*




At any point, **press “>>”** to switch to the decompression dive planner for the indicated depth. Galileo will add 1 minute to the no-stop time and show the resulting decompression obligation.

2.11.2 Planning a decompression dive

Once in the decompression dive planner, you can change the bottom time in 1 minute steps via the “+” and “-” buttons. Every time you increase the bottom time, Galileo shows you the corresponding decompression schedule in terms of deepest stop, time at deepest stop and total ascent time.

Pressing “>>” while in the decompression dive planner will bring you back to the no-stop dive planner. This allows you to choose

a different depth and continue planning. To exit the dive planner at any point in time, **press and hold “>>”**. This will bring you back to the main menu.

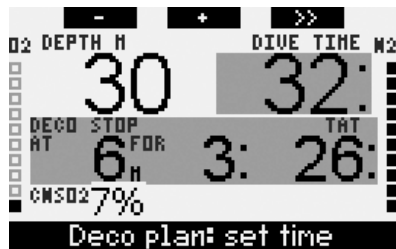

2.12 Reviewing the logbook

A dive is entered into the logbook if the dive time is longer than 2 minutes. Galileo can record the profiles of approximately 100 hours of diving. The information can be transferred to PC via the SmartTRAK software and an infrared interface (see Chapter 4 for details). In addition, Galileo can show most of the information directly on the display. You can reach the logbook from the main menu or by **pressing** the “LOG” button from the **time of day** display.




Upon first entering the **Logbook** menu, a summary page is presented with each dive reduced to a two-line format. These two lines contain:


- sequential dive number (the most recent dive is always dive number 1)
- date
- time
- max depth
- bottom time.

Using the “▲” and “▼” buttons, you can scroll through the entire list of dives.


Press “ENTR” to look up any particular dive. For each dive there are 5 pages.

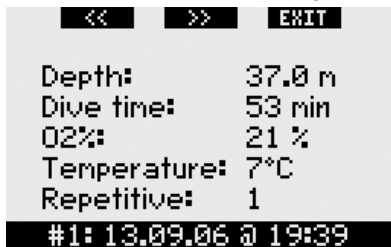

The first page contains details about depth, time, set oxygen concentration, minimum water temperature and dive number for that day. By pressing “>>” you advance to the second page of the log, whereas by pressing “<<” you advance to the last page of the log.

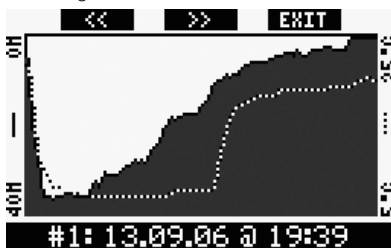

The second page shows the depth and the temperature profiles. Pressing “>>” brings you to the third page of the log.

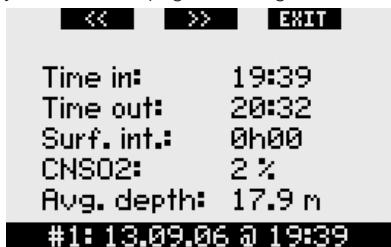

The third page shows the time the dive started, the time the dive ended, the surface interval prior to this dive, the CNS O₂ level at the end of this dive and the average depth of the dive.




The fourth page shows the MB level with which the dive was started and, if there was an MB level reduction, what the final MB level was. It also shows altitude class, the lowest battery level during the dive and the amount of gas consumed.



The fifth page shows a listing of all the alarms and warnings that were triggered during the dive.

Within the list of dives there is also **Dive statistics** with a range of dates. On this page you can see the longest dive ever made with the computer, the deepest dive, the total time spent underwater, the total number of dives and also the number of hours that the computer has been on (on the surface or diving) since the last battery change.

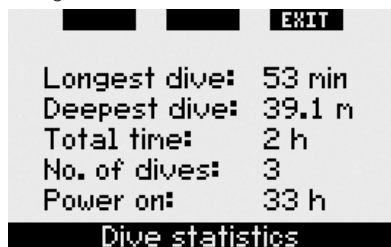

At any point in time inside the **Logbook** menu, press “EXIT” to return to the main **Logbook** menu.

3. DIVING WITH GALILEO

3.1 Nitrox

Nitrox is the term used to describe breathing gases made of oxygen-nitrogen mixes with oxygen percentage higher than 21% (air). Because Nitrox contains less nitrogen than air, there is less nitrogen loading on the diver's body at the same depth as compared to breathing air.

However, the increase in oxygen concentration in Nitrox implies an increase in oxygen partial pressure in the breathing mix at the same depth. At higher than atmospheric partial pressures, oxygen can have toxic effects on the human body. These can be lumped into two categories:

- Sudden effects due to oxygen partial pressure over 1.4bar. These are not related to the length of the exposure to high partial pressure oxygen, and can vary in terms of the exact level of partial pressure they happen at. It is commonly accepted that partial pressures up to 1.4bar are tolerable, and several training agencies advocate maximum oxygen partial pressures up to 1.6bar.
- Long-exposure effects to oxygen partial pressures over 0.5bar due to repeated and/or long dives. These can affect the **Central Nervous System**, cause damage to lungs or to other vital organs.


Galileo keeps you safe with respect to these two effects in the following ways:

- 1) Against sudden effects: Galileo has an MOD alarm set for a user-defined ppO_2max . As you enter the oxygen concentration for the dive, Galileo shows you the corresponding MOD for the defined ppO_2max . The default value of ppO_2max from the factory is **1.4bar**. This can be adjusted to your preference between **1.2** and **1.6bar**. It can also be turned **OFF**. Please refer to section 2.3.4 for more information on how to change this setting.
- 2) Against long exposure effects: Galileo "tracks" the exposure by means of the

CNS O_2 clock. At levels of 100% and higher there is risk of long-exposure effects, and consequently Galileo will activate an alarm when this level of CNS O_2 is reached. Galileo can also warn you when the CNS O_2 level reaches 75% (see section 2.6.2). Note that the CNS O_2 clock is independent of the value of ppO_2max set by the user.

The CNS O_2 clock increases when the oxygen partial pressure is higher than 0.5bar, and decreases when the oxygen partial pressure is lower than 0.5bar. Hence, while on the surface breathing air you will always be decreasing the CNS O_2 clock. During the dive, the depth at which 0.5bar is reached for various mixes is as follows:

Air:	13m/43ft
32%:	6m/20ft
36%:	4m/13ft

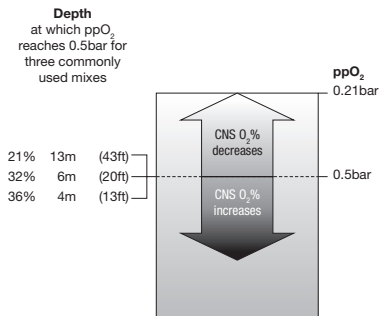

3.2 Alarms

Galileo can alert you of potentially dangerous situations via warnings and alarms.

Warnings represent situations that require the diver's attention, but ignoring them does not represent an immediate risk. The detailed description of each warning and how it appears on the screen is presented in section 2.6.

Alarms, on the other hand, can not be turned off because they represent situations that do require immediate action by the diver. There are six different alarms:

1. Ascent rate alarm
2. Exceeding a safe ppO₂/MOD
3. CNS O₂ =100%
4. Missed decompression stop
5. RBT = 0 minutes
6. Low battery during the dive



WARNING

When in gauge mode, all warnings and all alarms are **OFF** aside for the low battery alarm.

NOTE:

- Alarms are both visual and audible, as described in detail below.
- If you are in **COMPASS** mode when an alarm is triggered, Galileo will revert to the regular computer display (**CLASSIC**, **LIGHT** or **FULL**) in order to properly display the message related to the alarm.
- Ascent rate alarm has priority over other alarms if they are triggered simultaneously.
- If warnings are activated while alarms are showing, the former will show only after the alarms have expired and only if they are still applicable at that time.

3.2.1 Ascent rate

As you ascend during a dive, the pressure surrounding you diminishes. If you ascend too quickly, the ensuing pressure reduction could lead to microbubble formation. If you ascend too slowly, the continued exposure to high ambient pressure means that you will continue loading some or all of your tissues with nitrogen. Consequently, there is an ideal ascent rate that is slow enough to minimize microbubble formation yet fast enough to minimize the effect of continued loading on your tissues.

The pressure reduction that the body can tolerate without significant microbubble formation is higher at depth than it is in

the shallows: the key factor is not the pressure drop by itself, but rather the ratio of the pressure drop relative to the ambient pressure. This means that the ideal ascent rate at depth is higher than it is in the shallows.

Along these lines, Galileo employs a variable ideal ascent rate: its value ranges between 7 and 20m/min and the actual breakdown by depth range is listed in the table below.

depth (m)	<6	<12	<18	<23	<27	<31
	<35	<39	<44	<50	>50	
speed (m/min)	7	8	9	10	11	13
	15	17	18	19	20	
depth (ft)	<20	<40	<60	<75	<88	<101
	<115	<128	<144	<164	>164	
speed (ft/min)	23	26	29	33	36	43
	49	56	59	62	66	

During an ascent, the nitrogen loading bar graph is replaced by a graphical ascent rate indication. The full height of the bar graph represents twice the ideal ascent rate, so that when you are ascending at the ideal ascent rate half of the bar graph is lit. If more than half of the bar is lit you are ascending too fast. In addition, for **CLASSIC** and **FULL** only, Galileo displays the ascent rate numerically in place of the temperature.

If the ascent rate is greater than 110% of the ideal value the message **ASCENT TOO FAST!** appears.

The following pictures show how the ascent rate alarm message and the ascent rate value are displayed for the various screen configurations.

MODE	BOOK	MORE	LIGHT	SPD
DEPTH	15.4M		DIVE TIME	
			21	
ALARM	ASCENT TOO FAST!			
MAX	SPEED	BAR	RBT	
42.6M	140%	107	23	



Galileo also provides an audible alarm in case of ascent rates exceeding 110%: the intensity of the alarm increases in direct proportion to the degree that the ideal ascent rate is exceeded.

- In case of a fast ascent, Galileo may require a decompression stop even within the no-stop phase because of the danger of microbubble formation.
- From great depth a slow ascent may cause heightened saturation of tissues and an extension of both decompression duration and total ascent time. At shallow depth, a slow ascent may shorten the decompression duration.
- Excessive ascent rates for longer periods are entered in the logbook.

WARNING

The ideal ascent rate must not be exceeded at any time since this could lead to microbubbles in the arterial circulation which could cause serious injury or death.

Both the visual and the audible alarm persist for as long as the ascent rate is 110% or more of the ideal ascent rate.

3.2.2 MOD/ppO₂

WARNING

- The MOD should not be exceeded. Disregarding the alarm can lead to oxygen poisoning.
- Exceeding a ppO₂ of 1.6bar can lead to sudden convulsions resulting in serious injury or death.

In **CLASSIC** configuration, the alarm message **MOD EXCEEDED** is displayed in place of the no-stop or decompression information for 12 seconds, after which it is repeated in 4 second intervals. In addition, the current depth is shown in inverted colors (white on a black background), and in the lower left corner **MOD** and the value of the MOD are displayed, also in inverted colors. Alternate information is accessible as described in section 3.3.2, but after 5 seconds the inverted MOD is again shown. This will not change until the diver ascends 1m/3ft above the MOD. The audible signal persists until the diver ascends 1m/3ft above the MOD.



In **LIGHT** configuration, the alarm message **MOD EXCEEDED** is displayed in place of the no-stop information for 12 seconds, after which it is repeated in 4 second intervals. In addition, the current depth is displayed in inverted colors (white on a black background) and remains like this until the diver ascends 1m/3ft above the MOD. The audible signal persists until the diver ascends 1m/3ft above the MOD.



In **FULL** configuration, the alarm message **MOD EXCEEDED** is displayed in place of the no-stop or decompression information for 12 seconds, after which it is repeated in 4 second intervals. In addition, the current depth is shown in inverted colors (white on a black background), and **MOD** and the value of the MOD are displayed in place of the max depth, also in inverted colors. This will not change until the diver ascends 1m/3ft above the MOD. The audible signal persists until the diver ascends 1m/3ft above the MOD.



3.2.3 CNS O₂ = 100%

! WARNING


When the CNS O₂ reaches 100% there is danger of oxygen toxicity. Start procedure to terminate the dive.

In **CLASSIC** configuration, the alarm message **CNS O₂ = 100%** is displayed in place of the no-stop or decompression information for 12 seconds and during this time the audible signal goes off. In addition, in the lower left corner, the CNS O₂ information is displayed in inverted colors (white on a black background) and remains displayed until the CNS O₂ value drops under 100%. Alternate information is accessible as described in section 3.3.2,


but after 5 seconds the inverted CNS O₂ is again shown.



In **LIGHT** configuration, the alarm message **CNS O₂ = 100%** is displayed in place of the no-stop information for 12 seconds and during this time the audible signal goes off. In addition, after the text message extinguishes, the CNS O₂ is displayed in inverted colors (white on a black background) in the lower left corner, alternating every 4 seconds with the tank pressure information. This will remain so for as long as the CNS O₂ value is higher than 100%. Alternate information is available as described in section 3.3.3.

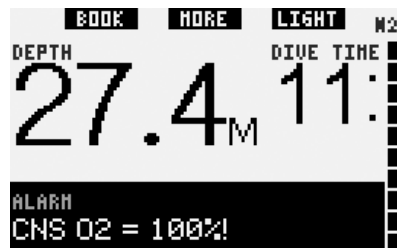

In **FULL** configuration, the alarm message **CNS O₂ = 100%** is displayed in place of the no-stop or decompression information for 12 seconds and during this time the audible signal goes off. In addition, the CNS O₂ information is displayed in inverted colors (white on a black background) and remains displayed until the CNS O₂ value drops under 100%.

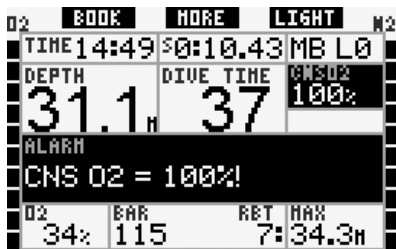

In all configurations, the alarm message and the audible signal are repeated for 5 seconds in 1 minute intervals after the first occurrence and for as long as the value of CNS O₂ stays at or above 100% or until the ppO₂ drops under 0.5bar (see section 3.1 for a list of depths at which ppO₂ equals 0.5bar for some typical Nitrox mixes).

3.2.4 Missed decompression stop



WARNING

Violating a mandatory decompression obligation may result in serious injury or death.

In **CLASSIC** configuration, the alarm message **MISSED DECO STOP!** is displayed for 12 seconds in the bottom row and the depth is shown in inverted colors (white on black background) for as long as the diver stays above the prescribed stop depth. The audible signal persists until the diver descends to the prescribed depth or deeper.



In **FULL** configuration, the alarm message **MISSED DECO STOP!** is displayed for 12 seconds in the bottom row and the depth is shown in inverted colors (white on a black background) for as long as the diver stays above the prescribed stop depth. The audible signal persists until the

diver descends to the prescribed depth or deeper.



3.2.5 RBT = 0 minutes

The RBT (remaining bottom time) is the time you can spend at the current depth and still have enough gas supply to make a safe ascent and reach the surface with the tank reserve. The RBT calculation is based on your current breathing rate, accounts for any existing and upcoming decompression obligation and for any temperature gradient in the water. It assumes an ascent at the ideal ascent rate (defined in section 3.2.1). When the RBT reaches 0 minutes, an alarm is triggered: Galileo has computed that if you start your ascent now and ascend at the ideal ascent rate, you will arrive at the surface with just the tank reserve, and any further delay increases the risk that you run out of gas supply before reaching the surface.



WARNING

If the RBT drops to 0 minutes, your gas supply is dangerously low and you may not be able to complete a safe ascent. This may result in serious injury or death. Do not let the RBT drop to 0 minutes!

In **CLASSIC** configuration, the alarm message **RBT = 0 MIN** is displayed in place of the no-stop or decompression information for 12 seconds and during this time the audible signal goes off. In addition, in the lower right corner, the RBT information is displayed in inverted colors (white on a black background). The audible signal does not stop unless the RBT grows to 1 minute or more, or if the depth is 6.5m/20ft or shallower.

O2	BOOK	MORE	LIGHT	M2
DEPTH		DIVE TIME		
18.6M		22		
ALARM				
RBT = 0 MINUTES				
MAX	TEMP	BAR	RBT	
42.6M	7°C	105	0:	

In **LIGHT** configuration, the alarm message **RBT = 0 MIN** is displayed in place of the no-stop information for 12 seconds and during this time the audible signal goes off. In addition, after the text message extinguishes, the RBT is displayed in inverted colors (white on a black background) in the lower right corner. The audible signal does not stop unless the RBT grows to 1 minute or more, or if the depth is 6.5m/20ft or shallower.

	BOOK	MORE	LIGHT	M2
DEPTH		DIVE TIME		
16.1M		35:		
ALARM				
RBT = 0 MINUTES				

In **FULL** configuration, the alarm message **RBT = 0 MIN** is displayed in place of the no-stop or decompression information for 12 seconds and during this time the audible signal goes off. In addition, the RBT information is displayed in inverted colors (white on a black background). The audible signal does not stop unless the RBT grows to 1 minute or more, or if the depth is 6.5m/20ft or shallower.

O2	BOOK	MORE	LIGHT	M2
TIME 0:38		0:00.06 MB L5		
DEPTH		DIVE TIME		CNSO2
17.9M		22		3%
ALARM				
RBT = 0 MINUTES				
O2	BAR	RBT	MAX	
21%	105	0:	42.2M	

Additionally, for all configurations, if the tank pressure reaches the specified tank reserve, the message **TANK RESERVE REACHED** is displayed on the screen for 12 seconds and the tank pressure information is displayed in inverted colors (white on a black background).

3.2.6 Low battery

WARNING

Do not start a dive if the **REPLACE BATTERY** message is displayed on the screen on the surface. The computer may fail to function during the dive and this could lead to serious injury or death.

During the dive, Galileo alerts you of precarious battery situations in two ways:

- By displaying **LOW BATTERY** on the screen. This means you can finish the dive but you should replace the battery once you return to the surface.
- By displaying **REPLACE BATTERY** on the screen. This means you need to start the procedure to terminate the dive, as there is not enough energy in the battery to ensure proper continued functioning and the computer may fail. During a **REPLACE BATTERY** alarm, the backlight cannot be activated, the audible warnings and alarms are not available anymore and the compass cannot be activated.

In a **LOW BATTERY** situation, the message is displayed at the bottom of the screen in 4 second intervals. In **LIGHT** screen configuration, the display switches to **CLASSIC** to allow for all the relevant information to be shown.

	BOOK	MORE	LIGHT	M2
DEPTH		DIVE TIME		
27.8M		5:		
NO STOP		12:		
ALARM				
LOW BATTERY				



! WARNING

If the **REPLACE BATTERY** message appears during the dive, start the procedure to terminate the dive, as the computer may fail. Do not let the battery reach this condition!

In a **REPLACE BATTERY** situation, the message is displayed on the bottom of the screen in 4 second intervals. In **LIGHT** screen configuration, the display switches to **CLASSIC** to allow for all the relevant information to be shown.



In addition to monitoring the status of its own battery, Galileo also monitors the status of the battery in the Smart transmitter and alerts you when the battery is low and should be replaced. The message **T1 BATTERY LOW** is displayed on the middle row of the screen in 4 second intervals. In **LIGHT** screen configuration, the display

switches to **CLASSIC** to allow for all the relevant information to be shown.



3.3 Display information

Upon immersion, the water contacts will automatically activate Galileo, unless they have been turned **OFF**. In this case, you must activate the computer manually before starting the dive. See section 2.8.6 for more information.

At a depth of 0.8m/3ft, Galileo starts to monitor depth and time and also to perform decompression calculations.

Details on the information displayed can be found in the next sections.

3.3.1 Description of entries

This section complements the information listed in the Glossary by adding specific details about Galileo's screen while diving. The **dive time** is displayed as dive time in minutes. If during the dive you ascend to the surface, the time spent on the surface will only be counted if you descend again below 0.8m/3ft within 5 minutes. This allows for brief periods of orientation. While on the surface, the time will not show as progressing but it is running in the background. As soon as you submerge, the time will resume, including the time spent on the surface.

Maximum displayed time is 999 minutes for **CLASSIC** and **FULL** configurations and 99 minutes for **LIGHT** configuration. For dives longer than that, the dive time starts again from 0 minutes.

Depth: the depth is given in 10cm resolution until 99.9 meters, after which it is given in 1m resolution. When the depth is displayed in feet, the resolution is always 1 foot. At a depth shallower than 0.8m/3ft, the display shows —. Maximum possible depth is 330m/1084ft. At depth greater than 1,000ft, the leading “1” is not shown, so 1084ft will be displayed as “084ft”.

WARNING

Galileo functions as a decompression computer to a depth of 120m/394ft only. At depths deeper than 120m/394ft it will automatically switch to gauge mode and it cannot be used as a decompression computer for the remainder of the dive. To alert you of the imminent switch, at depths between 115m/377ft and 120m/394ft Galileo displays the message **SWITCHING TO GAUGE**.

No-stop time: calculated in real time and updated every 0.5 seconds. Maximum displayed no-stop times are 199 minutes for **CLASSIC** and **FULL** configurations and 99 minutes for **LIGHT** configuration.

WARNING

During all dives, perform a safety stop between 3 and 5 meters/10 and 15 feet for 3 to 5 minutes, even if no decompression stop is required.

Temperature: Galileo displays the water temperature during the dive and the air temperature on the surface.

RBT: The RBT (remaining bottom time) is the time you can spend at the current depth and still have enough gas supply to make a safe ascent and reach the surface with the tank reserve. The RBT calculation is based on your current breathing rate, accounts for any existing and upcoming decompression obligation and for any temperature gradient in the water. It assumes an ascent at the

ideal ascent rate (defined in section 3.2.1). When the RBT reaches 0 minutes, it means that Galileo has computed that if you start your ascent now and ascend at the ideal ascent rate, you will arrive at the surface with just the tank reserve, and any further delay increases the risk that you run out of gas supply before reaching the surface.

NOTE:

- *Galileo needs approximately 2 minutes to analyze your breathing pattern, thus the RBT is not displayed during these first 2 minutes.*
- *When you are close to the depth of the deepest mandatory decompression stop, the RBT indicates the time you can stay at that depth before reaching the tank reserve.*


Tank pressure: based on the signal from the Smart transmitter. The Smart transmitter has a range of 1.5m/5ft. Unlike other UWATEC gas-integrated dive computers, this value is not temperature compensated. Temperature-compensated is still performed to ensure a correct RBT calculation, but the uncompensated value is displayed.

WARNING

- If Galileo receives no signal from the transmitter for 30 seconds, an audible sequence goes off and the message **NO PRESSURE SIGNAL** appears on the display for 12 seconds.
- If after another 40 seconds Galileo still has not received any signal from the transmitter, another audible sequence goes off and the message **PRESSURE SIGNAL LOST** appears for 12 seconds, after which the RBT is not displayed any longer and the tank pressure is replaced with ---. Check the position of Galileo with respect to the transmitter. Start ascending if you don't get a tank pressure reading.
- If you set **PRESSURE SIGNAL** to **OFF** as described in section 2.6.8, you will not get these warnings. In such case it is very important that you constantly monitor the tank pressure to avoid a low-gas supply situation.
- If the tank pressure reaches 14bar/200psi, the transmitter will turn off and Galileo will not show tank pressure any longer.

Buddy tank pressure: if your dive buddy also uses an UWATEC Smart transmitter, you can pair its signal to the **BUDDY** tank designation in your Galileo. Then, as long as you are within 1.5m/5ft of your buddy's transmitter, you can see the corresponding tank pressure on the screen of your Galileo.

Oxygen bar graph: This is the bar graph on the left side of the display (**CLASSIC** and **FULL** configurations) and it represents oxygen toxicity. The bar graph is made of ten segments. The first segment lights up at a CNS O₂ value of 5%, all other segments light up in 10% increments thereafter. At eight segments the CNS O₂ value corresponds to 75%, for which a warning can be triggered (see section 2.6.2). At 95% all segments are lit. At 100% the CNS O₂ alarm is triggered.

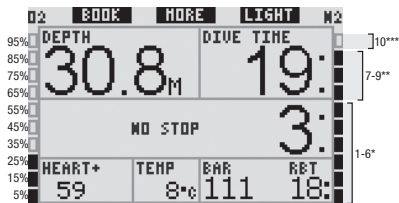

Nitrogen bar graph: This is the bar graph on the right side of the display (**CLASSIC**, **LIGHT** and **FULL** configurations). It represents nitrogen saturation in the leading tissue compartment. The bar graph is made of ten segments. The first nine segments represent gradually more loading but still within no-stop diving; the tenth segment represents the need for a mandatory decompression stop.

- 1-6 segments: You are safely within the no-stop zone.
- 7-9 segments: You are approaching decompression.
- 10 segments: You have a mandatory decompression obligation.


During a surface interval, the segments will gradually turn off as Galileo tracks the off-gassing of your tissues.

Tank pressure bar graph: In **CLASSIC** and **FULL** configurations, you can choose to replace the oxygen bar graph with a tank pressure bar graph as described in section 2.8.2. Each segment of the graph will then represent one tenth of the set maximum tank pressure. In the default setting, each segment represents 20bar/300psi.

Decompression information: deepest stop, time at deepest stop, total ascent time: when Galileo calculates the need for a mandatory decompression stop, it shows you **AT** what depth you need to stop first (deepest stop) and **FOR** how long (time at deepest stop). It also gives you the total ascent time (**TAT**). Total ascent times longer than 199 minutes are shown as "- -". To emphasize the change from a **NO STOP** dive to a **DECOMPRESSION** dive, this information is inverted in color, i.e. white numbers over a black background.

Decompression information at MB L0: if you are diving with an MB level different than MB L0, you can ask Galileo to show you the decompression information pertinent to the underlying MB L0 calculation. For more information on MB levels, please refer to section 3.5.

3.3.2 CLASSIC screen configuration

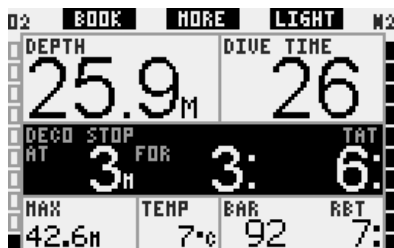

This screen configuration presents dive parameter information in a classic UWATEC arrangement. More specifically, the following information is displayed:

- current depth
- dive time
- no-stop time (only during no-stop phase of dive)
- deepest stop, duration of deepest stop, total ascent time (only during decompression phase of dive)
- tank pressure
- RBT
- oxygen concentration (until maximum depth is reached)
- maximum depth (only if max depth is 1m/3ft greater than current depth)
- water temperature
- nitrogen loading (via right bar graph)
- oxygen toxicity (via left bar graph)


Upon **pressing** the middle button (marked "MORE"), the information in the left corner changes in the following sequence:

- max depth
- O₂%
- stopwatch
- buddy tank pressure (only if **BUDDY** tank designation has been paired, see section 1.11)
- (active MB level if different than L0)
- (no-stop or decompression information relative to L0 if an MB level between L1 and L5 is active, see section 3.5.3)
- time of day
- CNS O₂
- average depth
- ppO₂

Each time you **press** the button the information changes to the next one in the sequence and stays there until you **press** the button again. If you **press** the button while the ppO₂ is displayed, the cycle starts again from the maximum depth.

The stopwatch runs in the background at all times. Each **press** of the left button ("BOOK") resets and restarts it, whether it is showing on the display or not.

3.3.3 LIGHT screen configuration

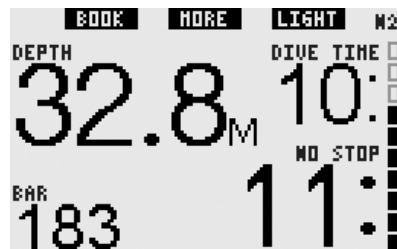

This screen configuration is meant for those divers that prefer to focus only on the essential information for the dive, yet retain the ability to access some of the remaining information as alternate fields.

The **LIGHT** configuration is possible during no-stop diving only: as soon as you enter level stops or deco, the screen configuration will automatically switch to the **CLASSIC** layout in order to fit all the relevant information.

NOTE:

Only the shorter between no-stop time and RBT is shown in **LIGHT** configuration. If your remaining gas supply is such that you will enter level stops or deco prior to reaching an RBT of 0 minutes, the no-stop time will be displayed on the screen, emphasized by the **NO STOP** label. If on the other hand your remaining gas supply is such that you will reach RBT of 0 minutes while still in the no-stop phase, then the RBT will be displayed on the screen, emphasized by the **RBT** label.

More specifically, the following information is displayed:

- current depth
- dive time
- the shorter between no-stop time and RBT
- tank pressure
- nitrogen loading (via bar graph)

WARNING

After a **PRESSURE SIGNAL LOST** warning, Galileo is not able to compute the RBT any longer. In such case, the **LIGHT** configuration shows the no-stop time but this does not imply that you have enough gas supply to remain at that depth for that amount of time.

Upon **pressing** the middle button (marked "**MORE**"), you can retrieve alternate information. This information appears instead of the tank pressure and stays on the display only for 4 seconds, after which the tank pressure is shown again. The alternate information appears in the following sequence:

- maximum depth
- O₂%
- temperature
- buddy tank pressure (only if **BUDDY** tank designation has been paired, see section 1.11)
- (active MB level if different than L0)
- (no-stop information relative to L0 if an MB level between L1 and L5 is active, see section 3.5.3)

- time of day
- CNS O₂

Each time you **press** the button the information changes to the next one in the sequence and stays there for 4 seconds before reverting to the tank pressure. If you **press** the "**MORE**" button again after the field has reverted to your tank pressure, the sequence of additional information will pick up again from the last displayed data.

3.3.4 FULL screen configuration

O ₂	BOOK	MORE	LIGHT	M2
TIME	10:13	0:03.25	MB L0	
DEPTH	37.8m	DIVE TIME	3	CNSO ₂
				1%
		NO STOP	9	TEMP
				7°C
				AUG
				20.5m
BUDDY	BAR	RBT	MAX	
196	166	11	42.3m	

O ₂	BOOK	MORE	LIGHT	M2
TIME	0:27	0:02.08	MB L0	
DEPTH	19.5m	DIVE TIME	18	CNSO ₂
				2%
DECO STOP		TAT		TEMP
3m	1	3		6°C
				AUG
				30.9m
O ₂	BAR	RBT	MAX	
21%	115	22	42.3m	

This screen configuration is meant for those divers that prefer to have as much information as possible displayed at once. More specifically, the following information is displayed:

- current depth
- dive time
- no-stop time (only during no-stop phase of dive)
- deepest stop, duration of deepest stop, total ascent time (only during decompression phase of dive)
- tank pressure
- RBT
- time of day
- stopwatch
- active MB level
- CNS O₂
- temperature
- average depth

- maximum depth
- oxygen concentration
- nitrogen loading (via right bar graph)
- oxygen toxicity (via left bar graph)

Upon **pressing** the middle button (marked "**MORE**"), the information in the left corner changes in the following sequence:

- O₂%
- buddy tank pressure (only if **BUDDY** tank designation has been paired, see section 1.11)
- (no-stop or decompression information relative to L0 if an MB level between L1 and L5 is active, see section 3.5.3)
- ppO₂

Each time you **press** the button the information changes to the next one in the sequence and stays there until you **press** the button again. If you **press** the button while the ppO₂ is displayed, the cycle starts again from the oxygen concentration. The stopwatch is reset and restarted by **pressing** the left button ("**BOOK**").

3.4 Special functions common to CLASSIC, LIGHT and FULL configurations

3.4.1 Accessing and using the digital compass

In all layouts, a **press and hold** of the right button (marked "**LIGHT**") brings up the digital compass display on your computer screen. The display also shows the depth, the dive time, the tank pressure and the shortest between the no-stop time and the RBT. In case of level stops or decompression, the lower right corner alternates every 4 seconds between decompression information and tank pressure together with RBT. A **press and hold** of the right button from the compass display returns to the computer display. This also happens after the set auto-off time defined in section 2.4.2.

☞ **NOTE:**


*If you are in compass mode when Galileo is about to end the no-stop phase, the screen will revert to the regular computer display regardless of the set auto-off time. **Press and hold** the right button again if you wish to return to the compass display.*



In this lay-out, the button functions change slightly. The middle button is now marked "**SET**". **Pressing** this button will set the bearing. Compass bearing represents the direction the front of the computer is pointed at. It is expressed in degrees, from 0 to 359. 0 degrees is North, 90 degrees is East, 180 degrees is South, 270 degrees is West and any other reading is interpolated in between.

The message **SET BEARING SUCCESSFUL** will show on the display and a dot will appear in the position of the set bearing. Setting a bearing allows you to navigate towards a reference direction. A **press and hold** of the middle button will erase the set bearing. Note that the set bearing stays in memory until you either set a new one or erase it. All set bearings are kept in the profile memory and can be viewed with SmartTRAK after downloading the dive to a PC.

If you have set a reference bearing, arrows will appear to the left or to the right of the numeric bearing indication, to show you in which direction you should turn in order to match the set bearing. As an additional aid in navigation, Galileo automatically marks the positions at 90 and 120 degrees to the left and to the right of the set bearing, in addition to the position at 180 degrees (as an aid for square-course, triangular-course and reciprocal-course navigation respectively). These are denoted with ⊥, Δ and ||.

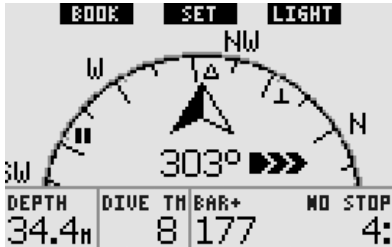

The left button (“**BOOK**”) still allows you to set bookmarks.

3.4.2 Setting bookmarks

By **pressing** the left button (**BOOK**) you can set any number of bookmarks as reminders of particular moments during the dive. In **CLASSIC**, **FULL** and **COMPASS** configurations, setting a bookmark also resets the stopwatch.

When you set a bookmark, Galileo will display the confirmation message **BOOKMARK SET** (if the safety stop timer is visible on the display, the message is not displayed. In **FULL** and **GAUGE** display configurations it also does not show, since the reset of the stopwatch is already an indication that the bookmark was set successfully). The bookmarks will appear on the dive profile in SmartTRAK.



3.4.3 Safety stop timer

At the end of a dive, at depths of 6.5m/20ft or shallower and if there are no decompression obligations, the left button label changes from “**BOOK**” to “**TIMER**” (unless the option is turned **OFF**, see section 2.3.3).

If **SAFETY STOP TIMER** in **DIVE SETTINGS** is set to **AUTOMATIC**:


If a minimum depth of 10m/30ft has been reached during the dive, at a depth of 5m/15ft the safety stop timer will automatically start a countdown and a bookmark will be added to the dive profile. If you go below 6.5m/20ft, the timer will disappear and the no-stop time is shown again. Upon returning to 5m/15ft, the timer will start again automatically. As long as you are shallower than 6.5m/20ft and there are no decompression obligations, you can **press TIMER** to start or restart the countdown manually.

If **SAFETY STOP TIMER** in **DIVE SETTINGS** is set to **MANUAL**:


At a depth of 6.5m/20ft and shallower **pressing “TIMER”** will activate the safety stop timer and add a bookmark to the dive profile. You can restart the timer any number of times. If you go below 6.5m/20ft, the timer will disappear and the no-stop time will be shown again. You need to **press “TIMER”** again upon ascending over 6.5m/20ft to restart the timer.

If **SAFETY STOP TIMER** in **DIVE SETTINGS** is set to **OFF**:

It is not possible to activate the safety stop timer.

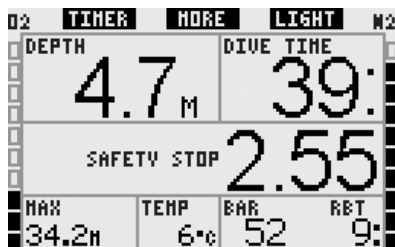

In compass mode, the safety stop timer works the same way as in the **CLASSIC**, **LIGHT** and **FULL** configurations. If the safety stop timer is active while switching from one configuration to the other, the timer information itself will transition smoothly between displays.

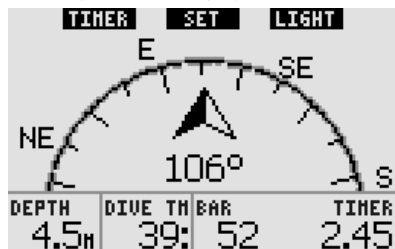


3.4.4 Viewing dive profile, individual compartment saturation and pictures

You can view your dive profile by **pressing and holding** the middle button (marked "MORE"). The screen will show a graphic representation of your dive profile together with a line representing either your possible direct ascent (if in no-stop mode) or your decompression profile (if in decompression mode). The dive profile will remain on your screen for a maximum of 12 seconds and then the dive computer information will appear again. You can revert to the dive computer screen at any time by **pressing and holding** the right button.



Pressing "MORE" while the dive profile is displayed brings up a graphical representation of the relative saturation for each of the eight compartments modeled by the ZH-L8 ADT MB algorithm. The height of each bar indicates the ratio of the current tissue loading with respect to the maximum tolerable loading, expressed in percentage. The color denotes whether the compartment is on-gassing or off-gassing: grey denotes compartments that are off-gassing, while black denotes compartments that are on-gassing. This representation, aside for the colors, is analogous to that given by the SmartTRAK software described in section 4.3. This graphical representation will remain on your screen for a maximum of 12 seconds and then the dive computer information will appear again. You can revert to the dive computer screen at any time by **pressing and holding** the right button.

3. Diving with Galileo

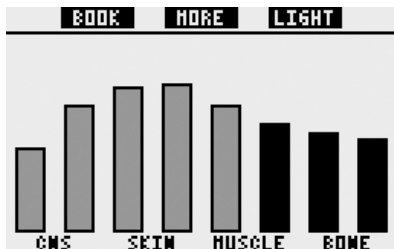

If you have uploaded pictures onto Galileo, you can view them during the dive by **pressing "MORE"** while the individual compartment saturation is displayed. Every time you **press "MORE"** while a picture is showing, the next picture in the memory sequence of Galileo will be called up. Each picture stays on the screen for a maximum of 12 seconds. You can revert to the dive computer screen at any time by **pressing and holding** the right button.

NOTE:

- Profile, compartment saturation and pictures can be viewed for a maximum of 1 minute, after which the regular dive computer screen will appear again.
- If any warning or alarm is triggered while you are viewing the profile, compartment saturation or the pictures, Galileo will immediately revert back to the dive computer screen.

3.4.5 Activating the backlight

To activate the backlight, **press** the right button (marked "**LIGHT**"). The default duration of the backlight is **6 seconds**, but you can set it between **2** and **12 seconds** in 1 second increments. You can also set it to **PUSH ON/PUSH OFF**, which means the light stays on until you turn it off by **pressing** the button again.

NOTE:

The backlight is not available when the **REPLACE BATTERY** warning appears.


3.5 Diving with MB levels

Microbubbles are tiny bubbles that can build up inside a diver's body during any dive and normally dissipate naturally during an ascent and on the surface after a dive. Dives within no-stop time and observance of decompression stops do not prevent the formation of microbubbles in the venous blood circulation. Galileo has been equipped with an enhanced UWATEC algorithm, named ZH-L8 ADT MB, to reduce the formation of these microbubbles.

This enhanced algorithm allows the user to choose a level of conservatism over and in addition to the worldwide proven safety record of the standard ZH-L8 ADT algorithm. There are five levels of added conservatism (or MB levels), from L1 to L5, with L5 being the most conservative and L1 being just a bit more conservative than the standard ZH-L8 ADT, here referred to as L0.

Choosing an MB level between L1 and L5 makes the algorithm more conservative, therefore the diver will have either shorter no-stop times or deeper and longer decompression stops (referred to as level stops) than when diving with L0. Consequently the body will either take up less nitrogen (shorter no-stop dives) or will be able to off-gas more before returning to the surface (dives with level stops). Both work towards reducing the amount of microbubbles present in the body at the end of the dive.

Please refer to section 2.3.1 for information on setting the MB level.

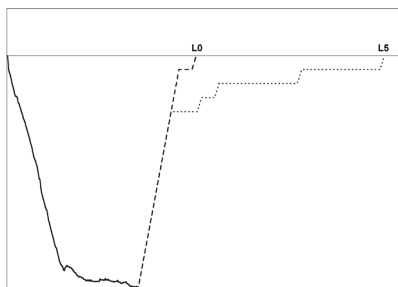

3.5.1 MB Glossary

Deco stop: decompression stop as requested by L0; mandatory.

L0: baseline algorithm corresponding to ZH-L8 ADT.

L1: first and lowest level of added conservatism.

L2: second level of added conservatism.

L3: third level of added conservatism.

L4: fourth level of added conservatism.

L5: fifth and highest level of added conservatism.

Level stop: decompression stop as requested by active MB levels L1 through L5; not mandatory.

Reduced level stop: decompression stop as requested by new active MB level, after an MB level reduction has taken place due to violation of level stop requirement.

ZH-L8 ADT: UWATEC's adaptive 8-tissue algorithm.

ZH-L8 ADT MB: UWATEC's adaptive 8-tissue algorithm with MB levels (added conservatism).

3.5.2 Display information

When diving with an MB level other than L0, Galileo still carries out all calculations relating to L0 in the background. To understand the relation between set MB level and the underlying L0 calculation and how the information appears on the display, we shall use the example of a dive with MB L3 set in the dive computer.


Situation	L3 information on display	L0 information in background	Display details
1	No-stop	No-stop	Display shows L3 no-stop time. L0 no-stop time can be called up by pressing "MORE" .
2	Level stop	No-stop	Display shows L3 level stop information. The L3 information is in black on a white background because L0 is still in no-stop time. Stop is described as LEVEL STOP . L0 no-stop time can be called up by pressing "MORE" .
3	Level stop	Decompression	
3.1	Level stop is deeper than deco stop		Display shows L3 level stop information. The L3 information is in white on a black background because L0 is also in decompression. The stop is described as LEVEL STOP because the stop depth relates to the L3 level only. L0 decompression information can be called up by pressing "MORE" .
3.2	Level stop is at same depth as deco stop		Display shows L3 level stop information. The L3 information is in white on a black background because L0 is also in decompression. The stop is described as LEVEL+DECO STOP because the stop depth is the same for L3 level and for L0. The TAT (total ascent time) refers to L3 level stop, so as the DECO STOP obligation is met, the description of the stop depth changes from LEVEL+DECO STOP to LEVEL STOP only. L0 decompression information can be called up by pressing "MORE" .



Situation 2



Situation 3.1

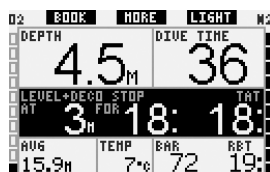


Situation 3.2


3.5.3 Display of underlying L0 decompression information

During the dive, the information displayed is always relative to the active MB level. However, in the **CLASSIC**, **LIGHT** and **FULL** display, the underlying L0 data is available as one of the alternate information fields. When **pressing** the **"MORE"** button the appropriate number of times, the L0 information will be visible instead of the active MB level information for 5 seconds, after which it is replaced again by the information relative to the active MB level. While the L0 information is shown, the symbol **L0** precedes either the word **NO STOP** or **DECO STOP**. This allows you to be aware of what the maximum possible no-stop time is or what the mandatory decompression requirements are.

For **CLASSIC** and **LIGHT**, the underlying L0 information is shown in the sequence right after the active MB level and before the time of day. This is displayed for 5 seconds instead of the MB level no-stop or decompression information. After 5 seconds it is replaced again by the information relative to the active MB level.

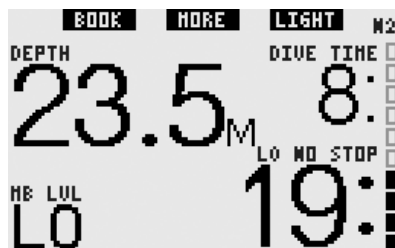

For **FULL** layout, the underlying L0 information is shown in the sequence right after the **BUDDY** tank pressure and before the ppO₂. This is displayed instead of the MB level no-stop or decompression information and remains there only for 5 seconds, after which it is replaced again by the information relative to the active MB level.

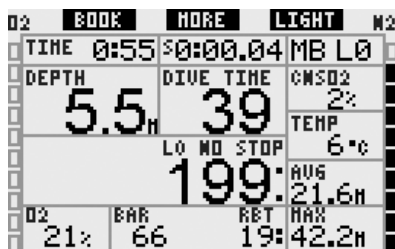

☞ **NOTE:**

The nitrogen bar graph always references the underlying L0 calculation.

3.5.4 Cascading MB levels

When diving with an MB level, Galileo carries out all calculations relating to L0 and to all MB levels in between the currently active one and L0. This gives the diver the flexibility to start with a given MB level but to cascade down to a less conservative level during the dive: If you start the dive at L4 but decide not to carry out all the required L4 stops, you can cascade down through L3, L2, L1 all the way to L0. Only decompression stops relating to L0 are mandatory and must be respected at all times, whereas the level stops calculated by the MB levels are recommended but not mandatory. Section 3.5.5 describes how to cascade to a lower level.

3.5.5 Level stop ignored/MB level reduced

If a level stop is required and you ascend 1.5m/5ft or more above it, Galileo will reduce your active MB level to the next one compatible with the current depth. When this happens, the new active MB level is permanently displayed on the screen. It is no longer possible to finish the dive with the MB level set at the beginning of the dive. When the level stop depth is the same as the deco stop depth, ascending 1.5m/5ft above it will cause Galileo to cascade down to L0.

At the end of the dive, for 5 minutes after reaching the surface, the active (reduced) MB level is shown on the display. After 5 minutes Galileo changes to surface mode and switches back to the MB level set prior to the dive, but the reduced MB level is recorded on the fourth page of the logbook.

3.6 Diving with PDIS

When Galileo is set to PDIS mode, it does PDIS calculation. See chapter 2.3.9 for how to switch PDIS mode on and off.

When the calculated PDI stop is deeper than 8m/25ft, Galileo shows it on the display and continues to do so until you reach the displayed depth during an ascent. The displayed value changes during the dive as Galileo tracks the uptake of nitrogen in

the 8 compartments and updates the PDIS depth accordingly to reflect the optimum at all times.

How the PDIS is displayed differs depending on whether you are in **NO STOP** or **DECOMPRESSION** and on the screen configuration.

3.6.1 PDIS during NO STOP diving

In **CLASSIC** and **FULL** screen configurations:

The PDIS depth is shown to the left of the no-stop time, with the label **PDIS**. As soon as you reach that depth during an ascent, a 2-minute countdown will appear in place of the no-stop value with label **PDIS TIMER**. You can have one of three situations:

- you have spent 2 minutes within 3m/10ft above the indicated depth. The countdown timer disappears, and the **PDIS** label and value are replaced by the label **PDIS OK** as an indication that you have performed the PDI stop;
- you have descended by more than 0.5m/2ft below the PDIS. The countdown timer disappears and will reappear again, starting at 2 minutes, the next time you ascend to the PDIS depth;
- you have ascended by more than 3m/10ft above the PDIS. The **PDIS** label, value and countdown timer are replaced by the label **PDIS NO** to indicate the fact that you have not performed the PDI stop.

O ₂	BOOK	MORE	LIGHT	M ₂
TIME	9:23	SO:02.10	MB	L0
DEPTH	23.4 _M	DIVE TIME	43:	TEMP
PDIS	13 _M	NO STOP	3:	AUG
O ₂	21%	CMSO ₂	4%	PPD ₂
			0.69	MAX
			38.2 _M	

PDIS display (FULL)

O ₂	BOOK	MORE	LIGHT	M ₂
DEPTH	12.8 _M	DIVE TIME	41:	
PDIS	13 _M	PDIS TIMER	1.51:	
O ₂	21%	TEMP	19°C	CMSO ₂
				MAX
			4%	38.7 _M

PDIS timer (CLASSIC)

O ₂	BOOK	MORE	LIGHT	M ₂
TIME	9:21	SO:04.15	MB	L0
DEPTH	11.8 _M	DIVE TIME	40:	TEMP
PDIS	OK	NO STOP	25:	19°C
O ₂	21%	CMSO ₂	4%	PPD ₂
			0.44	MAX
			26.8 _M	

PDIS OK (FULL)

O ₂	BOOK	MORE	LIGHT	M ₂
DEPTH	12.5 _M	DIVE TIME	41:	
PDIS	NO	NO STOP	14:	
O ₂	21%	TEMP	19°C	CMSO ₂
				MAX
			4%	38.7 _M




PDIS NO (CLASSIC)

In **LIGHT** screen configuration:

The PDIS depth is shown in the **MORE** sequence after the O₂% and before the temperature. As soon as you reach that depth during an ascent, a 2-minute countdown will appear in place of the no-stop value with label **PDIS TIMER**. You can have one of three situations:

- you have spent 2 minutes within 3m/10ft above the indicated depth while the timer is showing on the display. The **PDIS** label and value in the **MORE** sequence are replaced by the label **PDIS OK** as an indication that you have performed the PDI stop;
- you have descended by more than 0.5m/2ft below the PDIS. The countdown timer disappears and will

- reappear again, starting at 2 minutes, the next time you ascend to the PDIS depth;
- you have ascended by more than 3m/10ft above the PDIS. The **PDIS** label and value in the **MORE** sequence are replaced by the label **PDIS NO** to indicate the fact that you have not performed the PDI stop.

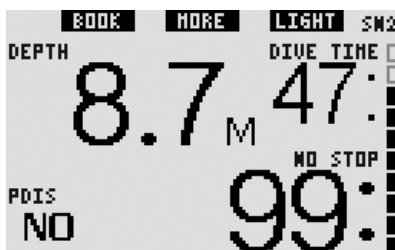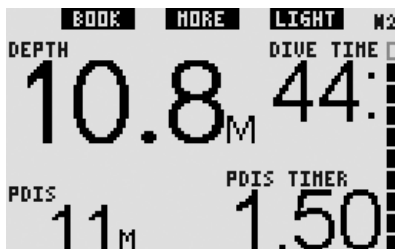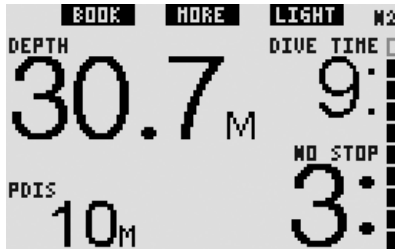

NOTE:

Galileo issues no warnings relating to a missed PDI stop.

3.6.2 PDIS during DECOMPRESSION diving

In **CLASSIC** and **FULL** screen configurations, upon entering decompression the PDIS information is moved to the lower left corner and becomes part of the **MORE** sequence. This prevents the potential misinterpretation between the PDI stop and the decompression stop. Additionally, in order to avoid conflicts between the PDIS range and a decompression stop, the PDIS depth is displayed only if it is 3m/10ft deeper than the deepest decompression stop.

As soon as you reach that depth during an ascent, the 2-minute countdown is initiated. The timer now appears to the very right of the PDIS label.



Descending by more than 0.5m/2ft below the PDIS or ascending by more than 3m/10ft above the PDIS follows the same rules as described in the **NO-STOP** case.



3.6.3 PDIS during dives with MB levels

When diving with MB levels, PDIS follows the same rules as described above. MB levels, however, introduce stops earlier and deeper than the L0 base algorithm. As such, the PDIS display may be delayed and for certain dives it may not be displayed at all. This for instance would be the case for a shallow dive with air (21% oxygen) and MB level L5.

3.7 Altitude and the decompression algorithm

Atmospheric pressure is a function of altitude and of weather conditions. This is an important aspect to consider for diving, because the atmospheric pressure surrounding you has an influence on on-gassing and off-gassing of nitrogen. Above a certain altitude, the decompression algorithm has to change in order to account for the effect of the change in atmospheric pressure.

Galileo divides the possible altitude range in 5 classes:

- class 0 (not indicated on the computer display): from sea level to approximately

- 1,000m/3,300ft (switch point at 905mbar);
- class 1: from approximately 1,000m/3,300ft to approximately 2,000m/6,600ft (switch point at 815mbar);
- class 2: from approximately 2,000m/6,600ft to approximately 3,000m/1,0000ft (switch point at 725mbar);
- class 3: from approximately 3,000m/10,000ft to approximately 4,000m/13,300ft (switch point at 610mbar);
- class 4: above approximately 4,000m/13,300ft. In this altitude class Galileo functions in gauge mode only (automatic switch from computer mode).

The altitude classes are defined in terms of approximate elevations because the effect of weather conditions can make the switch point pressure occur at different levels.



- ▲ Switch point at 610 mbar / 8,85 psi
- ▲ Switch point at 725 mbar / 10,51 psi
- ▲ Switch point at 815 mbar / 11,82 psi
- ▲ Switch point at 905 mbar / 13,82 psi

Galileo deals with altitude automatically: it monitors the atmospheric pressure every 60 seconds, even when it is turned off, and if it detects a sufficient drop in pressure, it does the following:

- it switches on (if it was off);
- it indicates the new altitude range by means of black segments inside the stylized mountain and, if applicable, the prohibited altitude range;
- it indicates the desaturation time, which in this case is an adaptation time to the new ambient pressure. If a dive is started during this adaptation time, Galileo considers it a repetitive dive, since the body has residual nitrogen.



3.7.1 Prohibited altitude

Going to altitude, as much as flying after diving, exposes your body to a reduced ambient pressure. In a way similar to the no-fly time, Galileo advises you which altitude classes are safe to reach after a dive and which aren't. If you have to drive over a mountain pass to return home after a dive, it can be quite important to have this information.

The prohibited altitude classes are displayed by grey segments inside the stylized mountain. This can be combined with black segments indicating current altitude. In the example above, the diver is presently at altitude class 2 and should not reach altitudes of class 4.

Galileo has an altitude alarm: If you were to reach an altitude that according to Galileo is incompatible with your current residual nitrogen levels, it will warn you with an altitude alarm (see section 1.4 for more information).

3.7.2 Decompression dives in mountain lakes

In order to assure optimal decompression even at higher altitudes, the 3m/10ft decompression stage is divided into a 4m/13ft stage and a 2m/7ft stage in altitude ranges 1, 2 and 3.

If atmospheric pressure is below 610mbar (altitude higher than 4,000m/13,300ft), no decompression calculation is carried out by Galileo (automatic gauge mode). In addition, the dive planner is not available in this altitude class.

3.8 Gauge mode

When Galileo is set to gauge mode, it will only monitor depth, time, tank pressure, and temperature, and will not carry out any decompression calculation. Maximum displayed dive time in gauge mode is 99 hours and 59 minutes. You can only switch to gauge mode if the computer is completely desaturated. All audible and visual alarms, other than the low battery alarm, are turned off.

WARNING

Dives in gauge mode are performed at your own risk. After a dive in gauge mode you must wait at least 48 hours before diving using a decompression computer.

When on the surface in gauge mode, Galileo will show neither the remaining desaturation time nor the CNS O₂% value. It will however display a surface interval up to 24 hours and a 48 hour no-fly time. This no-fly time is also the time during which you cannot switch back to computer mode.

The surface display changes as shown below:





During a dive in gauge mode, the following information is displayed:

- current depth

3. Diving with Galileo

- dive time
- tank pressure
- stopwatch
- maximum depth
- temperature
- time of day
- average depth
- in case of an ascent: ascent speed (in m/min or ft/min) in the position of the time of day.

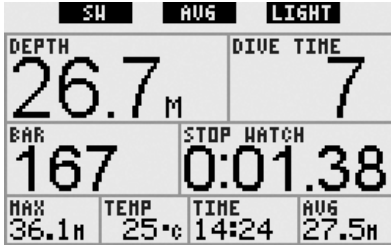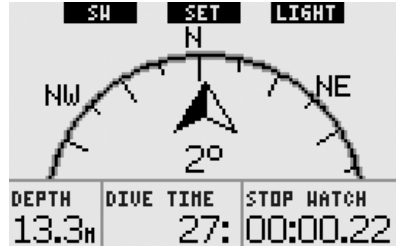

Upon **pressing** the left button (marked "SW"), a bookmark will be set while at the same time the stopwatch is reset.

Upon **pressing** the middle button (marked "AVG"), a bookmark will be set while at the same time the average depth is reset. Upon **pressing and holding** the middle button, the dive profile is displayed, followed by the pictures.

Upon **pressing and holding** the right button (marked "LIGHT"), the digital compass display is called up. In addition to the compass information, this display will also show the depth and the dive time. Tank pressure and stopwatch alternate every 4 seconds in the lower right corner. The stopwatch can again be reset by pressing the left button.

In compass layout display, the middle button allows you to set a reference bearing for navigation purposes. A **press and hold** will erase the set bearing.

The display will return to the regular gauge mode display after either the auto-off time or after a **press and hold** of the right button.

3.9 Button function overview

	LEFT BUTTON		MIDDLE BUTTON		RIGHT BUTTON	
	Press	Press and hold	Press	Press and hold	Press	Press and hold
CLASSIC	Set bookmark and reset stopwatch	-	Access alternate field. In sequence: - (Max depth) - O ₂ % Stopwatch - (Buddy tank pressure, if paired) - (Active MB level if other than LO) - (Information @ MB LO) - Time of day - CNS O ₂ - Average depth - ppO ₂	Access alternate display. In sequence (press): - Dive profile (with ascent, dotted) - Individual compartment saturation - Picture 1 - Picture 2 - ...	Activate backlight	Access compass display
LIGHT	Set bookmark	-	Access alternate field. In sequence: - (Max depth) - O ₂ % - Temperature - (Buddy tank pressure, if paired) - (Active MB level if other than LO) - (Information @ MB LO) - Time of day - CNS O ₂	Access alternate display. In sequence (press): - Dive profile (with ascent, dotted) - Individual compartment saturation - Picture 1 - Picture 2 - ...	Activate backlight	Access compass display
FULL	Set bookmark and reset stopwatch	-	-O ₂ % - (Buddy tank pressure, if paired) - (Information @ MB LO) - ppO ₂	Access alternate display. In sequence (press): - Dive profile (with ascent, dotted) - Individual compartment saturation - Picture 1 - Picture 2 - ...	Activate backlight	Access compass display
COMPASS	Set bookmark and reset stopwatch	-	Set bearing	Erase set bearing	Activate backlight	Manual return to regular display
GAUGE	Set bookmark and reset stopwatch	-	Set bookmark and reset average depth	Access alternate display. In sequence: - Dive profile - Picture 1 - Picture 2 - ...	Activate backlight	Access compass display

4. GALILEO AND SMARTTRAK (PC INTERFACE)

4.1 Introduction to SmartTRAK

SmartTRAK is the software that allows Galileo to communicate with a Windows-based PC. For more information on other platforms (Macintosh, Palm, PocketPC) please visit www.scubapro.com.


SmartTRAK serves five purposes:

- Changing settings: all the settings described in Chapter 2 can be set directly from the PC.
- Downloading dive profiles and organizing the logbook on the PC.
- Uploading pictures to Galileo.
- Uploading languages.
- Updating or upgrading the firmware on the computer.

In order to take advantage of any of these features, you need to establish an infrared communication between your PC and Galileo.

To start the communication:

- launch SmartTRAK on your PC
- turn on Galileo
- place the infrared interface in line of sight of the infrared window on Galileo.

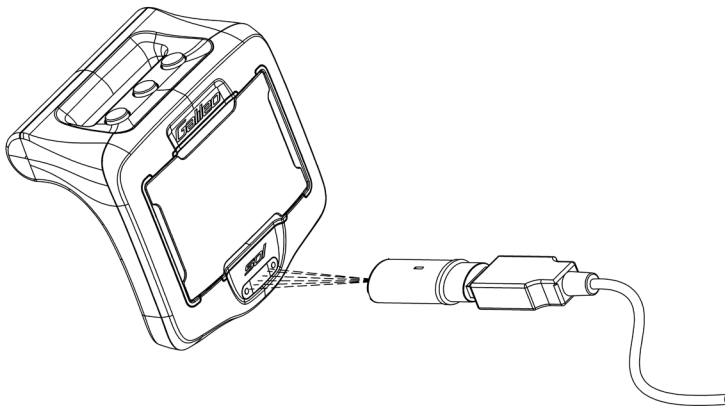

Galileo will show the symbol  on the display once the communication is in place.

4.2 Changing settings

You can change and review all the settings described in Chapter 2 from the comfort of your PC. The PC software allows you to see the entire array of settings at once, instead of individually on Galileo, and to make changes more rapidly.

Click on the **DIVE COMPUTER SETTINGS** icon: the PC will read the settings as presently configured in Galileo and show them as depicted below.

When all desired changes are made, press the **WRITE** icon in the dive computer settings window to transfer the changes over to Galileo. Closing the window prior to clicking on the **WRITE** icon and waiting for the transfer process to be complete will result in no changes being saved.

Dive Computer Settings

Battery capacity high enough for driving.

Info

Computer ID: 5100004010 HW: 00 SW: 20
Amb. pressure: 997 mbar

Battery

High
 High
 Medium
 Low
 Very low
 Inoperable

Personal statistics

Dives: 3 Dive time: 3.03
Longest dive: 82 min Deepest dive: 50.4 m

O2 settings | Dive settings | Digital compass | Warnings settings | Clock settings | Other settings | Personalization

Unit system:
 m °C bar
 ft °F psi

Screen configuration:
 Classic with grid Rotate 180°

Language:
 English

Workload:
 Respiration Heart rate: On Off

HR limits:
 Max: Base:

Owner information:

John Diver
 Cert. Number: 12345678
 First certified in 07/1975
 Dive ins.: 123456789AB
 Cell: +1 619 555 1234
 1166 Festler St
 El Cajon, CA 92020
 USA

Emergency information:

Allergic to penicillin!
 Blood type A+
 Emergency contact:
 John Smith
 +1 619 555 1234
 Insurance Policy:
 123 456 7890

NOTE:
 Please confirm each line with ENTER.
 Avoid writing over a line.

NOTE:
 Please confirm each line with ENTER.
 Avoid writing over a line.


NOTE:

Resetting the desaturation, all-silent mode, ppO_2 max turned **OFF** and reverting to factory default can be changed also via SmartTRAK but you will be prompted to enter the safety code for each setting.

4.3 Downloading dives and organizing your logbook

Galileo's memory allows you to store approximately 100 hours of dive profile information in 4 second sampling intervals. With SmartTRAK you can transfer this information to the PC in order to visualize and analyze your dives on the monitor. To download data from Galileo, click on **"NEW"** under the **LOGBOOK** menu to open and name a new logbook. Then click on the **TRANSFER DIVES** icon: a box will appear on the screen identifying the computer being accessed, and a progress bar will show the status of the transfer.

Download Date	Location	Site	Dive Type	Max. Depth	Pressure	Time	Interval	Max. Water Temp	Time	Gas	Balloon	Breath	Altitude	No. Flt	Time	ENS Alt	O2 Fraction	O2 Fraction	P Start	P End
1860 07 20 2006	Zuger See	Klauseneegg	Surface	31	01.41	09.35	---	24.0°C	0.42	18.54	6.00	11.1	23.1	---	---	---	---	---	1.6	1.0
1860 08 12 2006	Mattsee	Brändlebach-Horns	Surface	41	15.01	20.19	---	11.2°C	0.00	16.13	3.00	---	21.1	---	---	---	---	---	---	---
1860 10 20 2006	Scoppe	Summe	Surface	55	60.91	01.53	02.48	0.58	13.6°C	23.40	71.53	20.00	6.1	21.1	---	---	---	---	---	---
1870 20 12 2006	Scoppe	Summe	Surface	36	41.71	00.18	00.54	0.32	14.0°C	9.10	24.45	11.00	3.1	21.1	---	---	---	---	---	---
1870 10 12 2006	Scoppe	Summe	Surface	50	56.11	02.50	02.45	0.44	12.0°C	21.43	29.41	16.00	3.1	21.1	---	---	---	---	---	---
1877 10 12 2006	Scoppe	Summe	Surface	41	29.51	01.20	02.09	---	15.6°C	0.00	22.27	9.00	2.1	21.1	---	---	---	---	---	---
1878 10 12 2006	La Lahn	Strom	Surface	41	29.61	01.43	02.24	---	13.6°C	0.00	19.16	6.00	---	---	---	---	---	---	---	---
1875 14 12 2006	4-Wald	Urnellen	Surface	45	51.41	00.40	01.33	---	3.6°C	0.00	20.30	10.00	18.1	21.1	---	---	---	---	---	---
1874 12 12 2006	4-Wald	Urnellen	Surface	43	57.91	20.24	21.07	0.23	4.4°C	0.17	22.29	9.00	21.1	21.1	---	---	---	---	---	---
1873 07 12 2006	Comvaled	Diplöfen	Surface	43	3.31	20.64	01.44	0.74	17.6°C	12.07	14.58	11.00	---	---	---	---	---	---	---	---
1872 07 12 2006	Comvaled	Diplöfen	Surface	83	3.71	18.26	19.49	0.43	17.6°C	3.13	12.21	0.00	---	---	---	---	---	---	---	---
1871 08 12 2006	4-Wald	Urnellen	Surface	40	40.91	20.56	21.36	---	4.8°C	0.00	24.02	11.00	18.1	21.1	---	---	---	---	---	---
1870 04 12 2006	4-Wald	Urnellen	Surface	50	47.51	20.40	21.29	---	5.5°C	0.00	20.61	12.00	26.1	21.1	---	---	---	---	---	---
1869 20 11 2006	Bobensee	Häusern	Surface	41	61.81	19.00	19.43	---	3.2°C	0.00	23.00	10.00	14.1	21.1	---	---	---	---	---	---
1868 10 11 2006	4-Wald	Urnellen	Surface	44	58.21	20.45	21.29	---	3.2°C	0.00	22.21	9.00	24.1	21.1	---	---	---	---	---	---
1867 14 11 2006	4-Wald	Urnellen	Surface	51	60.01	19.55	20.46	---	3.6°C	0.00	24.10	11.00	18.1	21.1	---	---	---	---	---	---
1866 12 11 2006	4-Wald	Urnellen	Surface	43	47.81	20.27	21.10	---	4.4°C	0.00	24.10	11.00	22.1	21.1	---	---	---	---	---	---
1865 07 11 2006	Juan les Pins	Juan les Pins	Surface	53	28.41	15.51	16.24	---	19.2°C	0.00	25.00	12.00	18.1	21.1	---	---	---	---	---	---
1864 03 11 2006	4-Wald	Urnellen	Surface	55	48.91	19.51	20.46	---	3.2°C	0.00	24.23	11.00	1.1	21.1	---	---	---	---	---	---
1863 20 10 2006	4-Wald	Urnellen	Surface	66	47.81	17.00	18.14	0.20	4.4°C	2.03	21.30	14.00	16.1	21.1	---	---	---	---	---	---
1862 20 10 2006	4-Wald	Urnellen	Surface	58	58.01	16.29	17.27	---	2.8°C	0.00	24.43	12.00	19.1	21.1	---	---	---	---	---	---
1861 20 10 2006	Comvaled	Diplöfen	Surface	51	3.91	19.53	20.44	0.19	15.6°C	0.33	12.01	0.00	---	---	---	---	---	---	---	---
1860 10 20 2006	Comvaled	Diplöfen	Surface	60	4.91	18.44	19.33	---	14.4°C	0.00	14.52	0.00	---	---	---	---	---	---	---	---
1859 18 10 2006	4-Wald	Urnellen	Surface	64	53.61	20.42	21.46	---	3.6°C	0.00	24.50	11.00	13.1	21.1	---	---	---	---	---	---
1858 15 10 2006	4-Wald	Urnellen	Surface	66	54.21	19.21	19.27	---	3.6°C	0.00	25.13	12.00	13.1	21.1	---	---	---	---	---	---
1857 11 10 2006	4-Wald	Backertsee	Surface	52	52.81	20.15	21.12	---	1.6°C	0.00	7.40	15.00	5.1	21.1	---	---	---	---	---	---
1856 10 10 2006	4-Wald	Backertsee	Surface	32	11.11	21.29	22.01	---	14.0°C	0.00	11.54	0.00	---	---	---	---	---	---	---	---
1855 09 10 2006	4-Wald	Urnellen	Surface	40	54.11	20.25	21.06	---	3.6°C	0.00	21.21	8.00	1.1	21.1	---	---	---	---	---	---
1854 10 10 2006	Oberbergen	Oberbergen	Surface	30	9.91	11.51	12.21	17.52	6.8°C	7.53	14.19	0.00	---	---	---	---	---	---	---	---
1853 07 10 2006	Osniesch	Oberbergen	Surface	60	11.11	16.00	17.58	2.44	8.4°C	16.95	25.44	0.00	---	---	---	---	---	---	---	---
1852 07 10 2006	Osniesch	Oberbergen	Surface	48	9.91	13.55	14.03	17.37	6.8°C	16.50	20.50	0.00	---	---	---	---	---	---	---	---
1851 05 10 2006	Bobensee	Häusern	Surface	42	67.11	18.55	19.37	---	3.2°C	0.00	19.57	7.00	13.1	21.1	---	---	---	---	---	---
1850 20 10 2006	Zugger See	Klauseneegg	Surface	52	49.81	19.33	20.19	---	2.0°C	0.00	24.10	11.00	18.1	21.1	---	---	---	---	---	---
1849 13 09 2006	Juan les Pins	Juan les Pins	Surface	70	38.61	17.54	18.04	---	19.6°C	0.00	26.11	13.00	1.1	21.1	---	---	---	---	---	---
1848 11 09 2006	Costa-Azzura	Hynes	Surface	50	28.61	17.54	18.20	4.86	21.2°C	11.15	27.22	14.00	---	---	---	---	---	---	---	---
1847 17 09 2006	Costa-Azzura	Hynes	Surface	47	42.71	10.11	10.58	---	16.4°C	0.00	23.51	10.00	2.1	21.1	---	---	---	---	---	---
1846 14 09 2006	Zugger See	Klauseneegg	Surface	59	48.51	20.07	21.06	3.39	2.4°C	23.91	31.40	18.00	22.1	21.1	---	---	---	---	---	---
1845 14 09 2006	Zugger See	Klauseneegg	Surface	64	53.21	19.23	19.27	19.90	1.6°C	8.12	22.90	14.00	19.1	21.1	---	---	---	---	---	---
1844 13 09 2006	Zugger See	Klauseneegg	Surface	53	38.41	19.39	20.30	---	0.8°C	0.00	25.00	12.00	2.1	21.1	---	---	---	---	---	---
1843 09 09 2006	Luc Leman	Horsbode	Surface	43	46.31	15.40	16.29	3.91	4.8°C	18.54	24.23	11.00	11.1	21.1	---	---	---	---	---	---
1842 08 09 2006	Luc Leman	Horsbode	Surface	46	58.61	11.02	11.48	---	4.4°C	0.00	21.55	9.00	15.1	21.1	---	---	---	---	---	---
1841 08 09 2006	Zuger See	Klauseneegg	Surface	32	40.51	20.31	21.03	---	3.6°C	0.00	16.47	3.00	---	---	---	---	---	---	---	---
1840 08 09 2006	Novay	Stokkoya	Surface	70	50.51	16.07	17.17	3.52	7.6°C	20.15	24.10	21.00	3.1	21.1	---	---	---	---	---	---
1839 03 09 2006	Novay	Stokkoya	Surface	62	63.41	11.11	12.13	19.39	6.4°C	12.45	29.07	16.00	3.1	21.1	---	---	---	---	---	---
1838 01 09 2006	Novay	Stokkoya	Surface	41	41.11	15.40	16.29	3.14	9.2°C	22.56	31.24	16.00	2.1	21.1	---	---	---	---	---	---
1837 01 09 2006	Novay	Stokkoya	Surface	61	43.31	11.32	12.23	18.14	8.0°C	13.07	21.11	14.00	---	---	---	---	---	---	---	---
1836 31 08 2006	Novay	Stokkoya	Surface	64	48.71	16.13	17.17	4.16	7.6°C	19.04	31.22	18.00	3.1	21.1	---	---	---	---	---	---

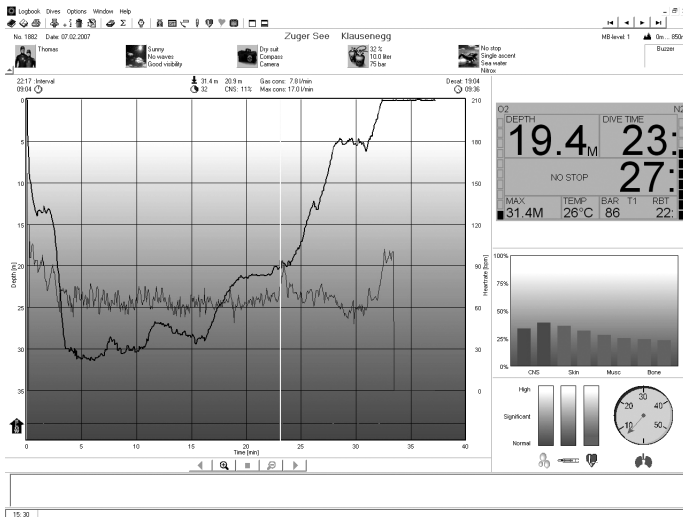

You can choose between transferring all dives or new dives only (default setting) from Galileo's memory. If you choose to transfer new dives only, SmartTRAK will only transfer dives that are more recent than the most recent dive already saved in the PC logbook.

Once the data is downloaded, a window will show you a summary table of all dives; for the selected dive, another window will show you its details. From these windows you can add and edit your dive information.

4.4 Uploading pictures


Galileo's memory allows you to store up to 100 grey-scale bitmap pictures which can be viewed on the surface or underwater as described in Chapters 2.10 and 3.4.

To handle pictures, you need to choose **GALILEO SETUP** under **OPTIONS**. This will bring up the Galileo Setup window, which has various tabs along the right edge. Click on the **PICTURES** tab and you will see a window similar to the one depicted below.

Pictures already stored in Galileo's memory will be shown to the very right end of your screen. Their sequence corresponds to the actual viewing sequence on Galileo's screen. The sequence can only be changed by deleting and reloading the pictures. To delete a picture, select it by clicking it and press the **"DELETE"** button under the preview.

To upload pictures to Galileo, use the dialog box to the left to browse your hard drive and locate the pictures of interest. After selecting a picture, SmartTRAK shows a grey scale preview of the same picture, as it will appear on Galileo. You can adjust the grey levels using the sliding bars above the preview, then click on the arrow on top to transfer the picture to Galileo.

If you wish to download pictures from Galileo to the PC, select a picture and click on the arrow underneath the preview window.

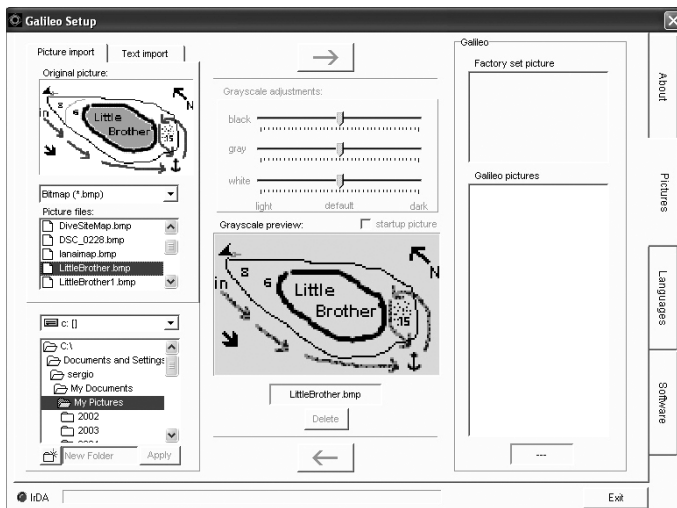


You can also import text to Galileo using the **TEXT IMPORT** function: for instance, load a few typical messages to communicate with your dive buddy, and when the need arises, bring up the message on the display and show it to him or her. Or you can write down a dive plan and then review it during the dive. The **TEXT IMPORT** function turns text that you write into the appropriate field using SmartTRAK into bitmap images which you can then upload to Galileo.

4.5 Uploading languages

All Galileo's menus and settings are displayed in full text in one of several languages which you can set as explained in section 2.9.2. Similarly, while diving, warnings and alarms are displayed in full text in the selected language.

Other languages are available at www.scubapro.com for free download to Galileo. To install a new language onto Galileo, download the language from the SCUBAPRO UWATEC website to your PC. Using SmartTRAK, locate the language file on your hard drive, then import it by clicking on the "**IMPORT**" button and press the arrow to transfer it to Galileo. On the right side of the screen you will see the full list of languages installed on Galileo. You can remove a language by clicking on it and then pressing the "**DELETE**" button.

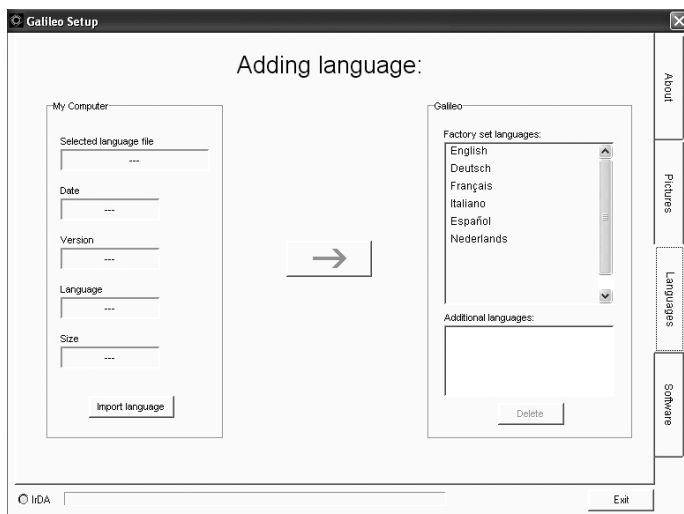

4.6 Updating or upgrading the firmware

Galileo features a reprogrammable microprocessor which allows you to keep your dive computer up to date with new UWATEC technologies. Please refer to the information provided at www.scubapro.com in reference to updates or upgrades.

5. TAKING CARE OF GALILEO

5.1 Technical information

Operating altitude:

- with decompression – sea level to approximately 4,000m/13,300ft
- without decompression (gauge mode) – at any altitude

Max operating depth: 330.5m/1,084ft; resolution is 0.1m until 99.9m and 1m at depth deeper than 100m. Resolution in ft is always 1ft. Accuracy is within 2% ±0.2m/1ft.

Decompression calculation range: 0.8m to 120m

Maximum environment pressure: 34bar

Smart Transmitter maximum working pressure: 300bar/4,350psi

Digital compass:

- **resolution:** 1°
- **accuracy:** +/- 1° + 5% of tilt angle (example: at 50° tilt, accuracy is +/-3.5°)
- **tilt angle:** up to 80°
- **refresh rate:** 1s

Clock: quartz clock, time, date, dive time display up to 999 minutes

Oxygen concentration: adjustable between 21% and 100%

Operating temperature: -10°C to +50°C / 14°F to 122°F

Power supply:

- **Galileo:** CR12600SE or CR2NP
- **High-pressure transmitter:** CR2450

Life of the battery:

- **Galileo:** 3-5 years or 300-500 dives. Actual battery life depends on the number of dives per year, the length of each dive, the water temperature and the usage of digital compass and backlight.
- **High-pressure transmitter:** 3 years or 150-200 dives. Actual battery life depends on the number of dives per year, the length of each dive and the water temperature.

5.2 Maintenance

The tank pressure gauge and the parts of this product used to measure tank pressure should be serviced by an authorized SCUBAPRO UWATEC dealer every other year or after 200 dives (whichever comes first). In addition, the depth accuracy should be verified every two years. Aside from that, Galileo is virtually maintenance-free. All you need to do is rinse it carefully with fresh water after each dive and change the battery when needed. To avoid possible problems with your Galileo, the following recommendations will help assure years of trouble-free service:

- avoid dropping or jarring your Galileo
 - do not expose Galileo to intense, direct sunlight
 - do not store Galileo in a sealed container, always ensure free ventilation.
- If there are problems with the water contacts, use soapy water to clean Galileo and dry it thoroughly. The housing of Galileo can be treated with silicone grease, but do not apply silicone grease to the water contacts!
- Do not clean Galileo with liquids containing solvents.
 - Check the battery capacity before each dive.
 - If the battery warning appears, replace the battery.
 - If any error message appears on the display, take Galileo back to an authorized SCUBAPRO UWATEC dealer.

5.2.1 Replacing the battery in Galileo

WARNING

We recommend having the battery of Galileo replaced by an authorized SCUBAPRO UWATEC dealer. The change must be made with particular care in order to prevent water from seeping in. The warranty does not cover damages due to an improper placement of the battery.

Galileo stores the tissue saturation information in non-volatile memory, so the battery can be replaced at any time between dives without loss of information.

5. Taking care of Galileo

Procedure:

To replace the battery you need a coin or the dedicated tool that came with Galileo and a clean cloth.

WARNING


- A leaking battery cap may lead to the destruction of Galileo by water seeping in or cause Galileo to switch off without prior notice.
- Always open the battery compartment in a dry and clean environment.
- Only open the battery compartment to replace the battery.

1. Dry Galileo with a soft towel.
2. Unscrew the battery cap using a coin or the dedicated tool.



3. Inspect the o-ring on the battery cap. If you see traces of seeping water, damages or defects on the o-ring, replace the o-ring with an original UWATEC replacement part (PN 06.202.693). The o-ring is provided with the UWATEC battery kit for Galileo (PN 06.202.872). When replacing the o-ring, make sure the new o-ring is in perfect condition and well lubricated, and that the o-ring, o-ring groove and sealing surfaces are free of dust and dirt.
4. Remove the old battery and dispose of it in an environmentally friendly way.
5. Check the polarity of the new battery. Galileo can be damaged if you do not insert the battery correctly. Insert the battery so that the + side is pointing out of the battery case.
6. Screw the battery cap back in place. Turn the cap until it is flush with the surface and the slot on the battery cap is aligned with the mark on the

housing. Damage to Galileo due to improper placement of the battery cap is not covered by warranty.

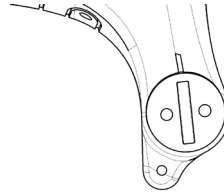

7. Check Galileo by turning it on.

NOTE:

- After a dive, Galileo stores tissue saturation data once an hour while on the surface until it is completely desaturated. If you change the battery while Galileo has remaining desaturation time, the tissue data will not be lost, but Galileo will reference the last stored data set. As a consequence, the data displayed on the surface screen after the battery change (desaturation time, surface interval, no-fly time and CNS O₂) may be different from the values displayed just prior to the battery removal.
- After replacing the battery, you must set the date and time.

5.2.2 Replacing the battery in the Smart transmitter

WARNING

We recommend having the battery of the transmitter replaced by an authorized SCUBAPRO UWATEC dealer. The change must be made with particular care in order to prevent water from seeping in. The warranty does not cover damages due to an improper placement of the battery.

For best results, use the transmitter battery set PN 06.204.071, comprising a 3V CR 2/3 AA battery and a 26.00 x 2.00 mm transmitter cap o-ring.

⚠ WARNING

- Never touch the metal surface of the battery with bare fingers. The two battery poles must never be short-circuited.
- A leaking transmitter cap may lead to the destruction of the transmitter by water seeping in or cause the transmitter to switch off without prior notice.
- Always open the transmitter in a dry and clean environment.
- Only open the transmitter to replace the battery.



1. Remove the transmitter from the HP port of the first-stage regulator.
2. Dry the transmitter with a soft towel.
3. Remove the 3 screws with a Phillips screwdriver.
4. Carefully remove the transmitter cap.
5. Carefully remove the transmitter cap o-ring. Be careful not to damage the sealing surfaces.
6. Remove the battery by holding it on both sides. Do not touch the contacts or the electronic parts.

⚠ WARNING

If you notice traces of seeping water, damages or other defects on the o-ring, do not use the transmitter for further dives. Take it to an authorized SCUBAPRO UWATEC dealer to be checked.

7. Always insert a new o-ring when you replace the battery and dispose the old o-ring. Make sure that the new, lubricated o-ring is in perfect condition, and that o-ring, o-ring groove and the sealing surface of the transmitter and transmitter cap are free of dust and dirt. If necessary, clean the parts with a soft cloth. Fit the o-ring in the o-ring groove.

8. Wait for 30 seconds, then insert the new battery. Ensure that the "+" side is facing away from the transmitter. The transmitter can be damaged if you do not insert the battery correctly.
9. The transmitter will now perform an automatic test and switch into ready mode after 60 seconds.

5.3 Warranty

Galileo has a two-year warranty covering defects in workmanship and functioning. The warranty only covers dive computers which have been bought from an authorized SCUBAPRO UWATEC dealer. Repairs or replacements during the warranty period do not extend the warranty period itself. Excluded from warranty coverage are faults or defects due to:

- excessive wear and tear
- exterior influences, e.g. transport damage, damage due to bumping and hitting, influences of weather or other natural phenomena
- servicing, repairs or the opening of the dive computer by anybody not authorized to do so by the manufacturer
- pressure tests which do not take place in water
- diving accidents
- improper placement of the battery cap.

For European Union markets, the warranty of this product is governed by European legislation in force in each EU member state.

All warranty claims must be returned with dated proof-of-purchase to an authorized SCUBAPRO UWATEC dealer. Visit www.scubapro.com for the dealer nearest you.



Your dive instrument is manufactured with high-quality components that can be recycled and reused. Nevertheless these components, if not properly managed in accordance with the regulations on waste electrical and electronic equipment, are likely to cause harm to the environment and/or to human health. Customers living in the European Union can contribute to protecting the environment and health by returning old products to an appropriate collection point in their neighbourhood in accordance with EU Directive 2012/19/UE. Collection points are in particular provided by some distributors of the products and local authorities. Products marked with the recycling symbol on the left must not be disposed of in normal household waste.

5.4 Index

Active backlight	35, 56	Owner information	9, 38
Alarm clock	34	Oxygen concentration	19
Alarms	42	Oxygen bar graph	50
All-silent mode	22	Oxygen partial pressure	42, 44
Altimeter	24	Oxygen toxicity	26, 42, 45
Ascent rate	43	Pairing of transmitter	7, 13
Ascent rate bar graph	43	PC interface	66
Backlight	35, 56	PDIS	15, 23, 59
Battery	11, 47, 71, 72	Personalization	37
Bookmarks	54	Pictures	39, 55, 56
Buddy tank pressure	14, 50	pp O ₂ max	7, 20, 42, 44
Buttons	13, 65	RBT	7, 30, 35, 46, 49
Clock settings	33	Residual nitrogen bar	50
CNS O ₂	7, 26, 42, 45	Revert to factory settings	37
Compartment saturation graph	50, 55	Safety stop timer	20, 54
Compass	23, 53	Screen configurations	12, 37, 51, 52
Date	34	SmartTRAK	66
Declination	24	SOS mode	8, 10, 39
Desaturation	7, 9	Start-up picture	38
Desaturation reset	22	Stopwatch	8, 51, 52, 64
Digital compass	23, 51	Surface interval	8, 10
Display configuration	24, 37, 51, 52	Tank pressure bar graph	35, 50
Display contrast	36	Technical information	69
Dive planner	39	Time of day	34
Diving at altitude	62	Time zone	34
Emergency information	11, 39	Tissue saturation graph	50, 55
Flying after diving	9	Units	38
Gauge mode	20, 63	UTC	8, 34
IrDA	7, 36	Wake-up alarm	34
Language	37, 70	Warnings	25
Logbook	40, 68	Water contacts	36
Maintenance	71	Water type	19
MB levels	7, 20, 56		
Microbubbles	56		
MOD	7, 44		
Mountain lakes	10, 63		
Mounting of transmitter	13		
No-dive warning	10		
Nitrogen bar graph	50, 59		
Nitrox	7, 42		
Nitrox reset	21		
No-fly time	7, 9		